

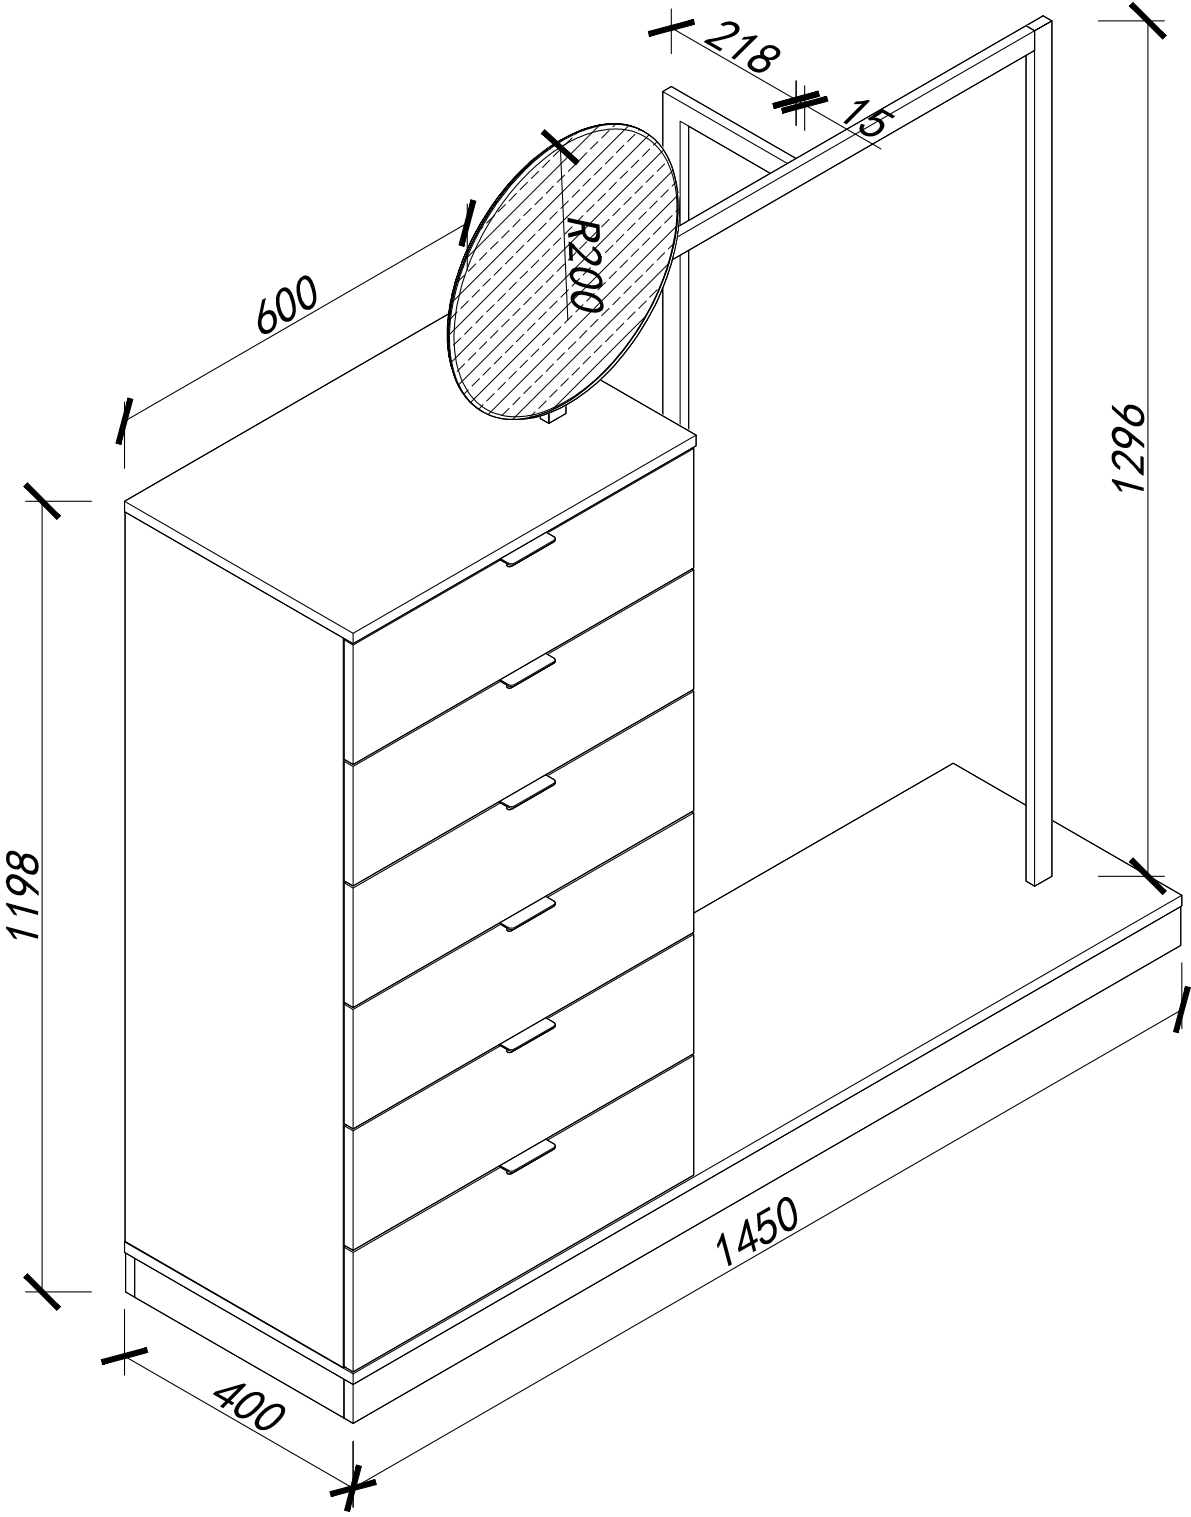
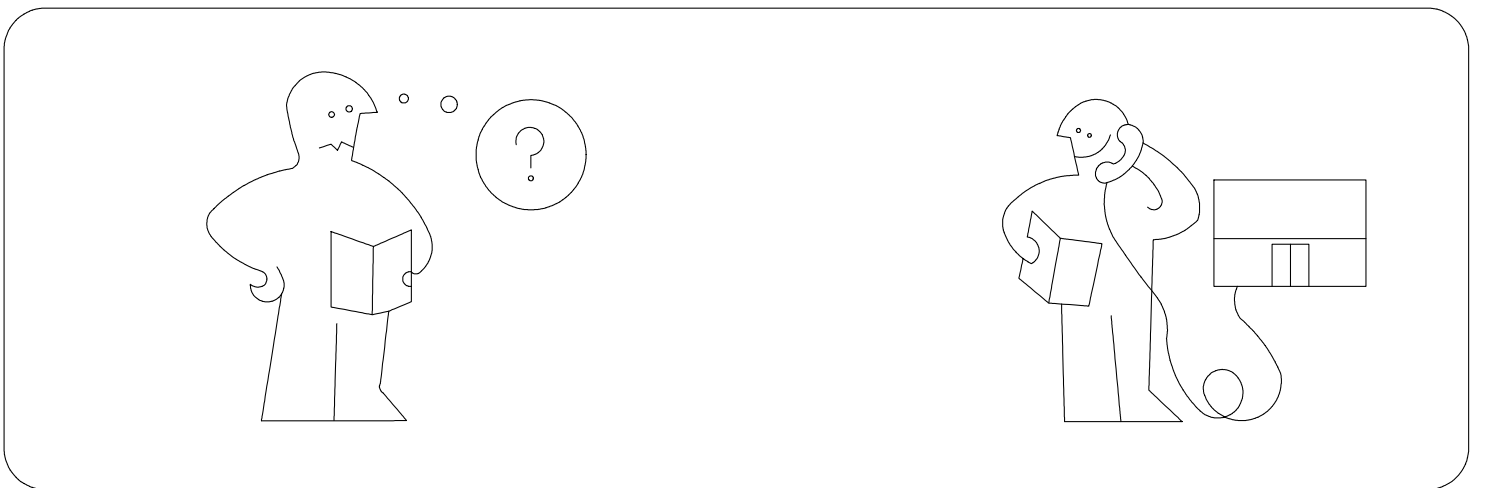
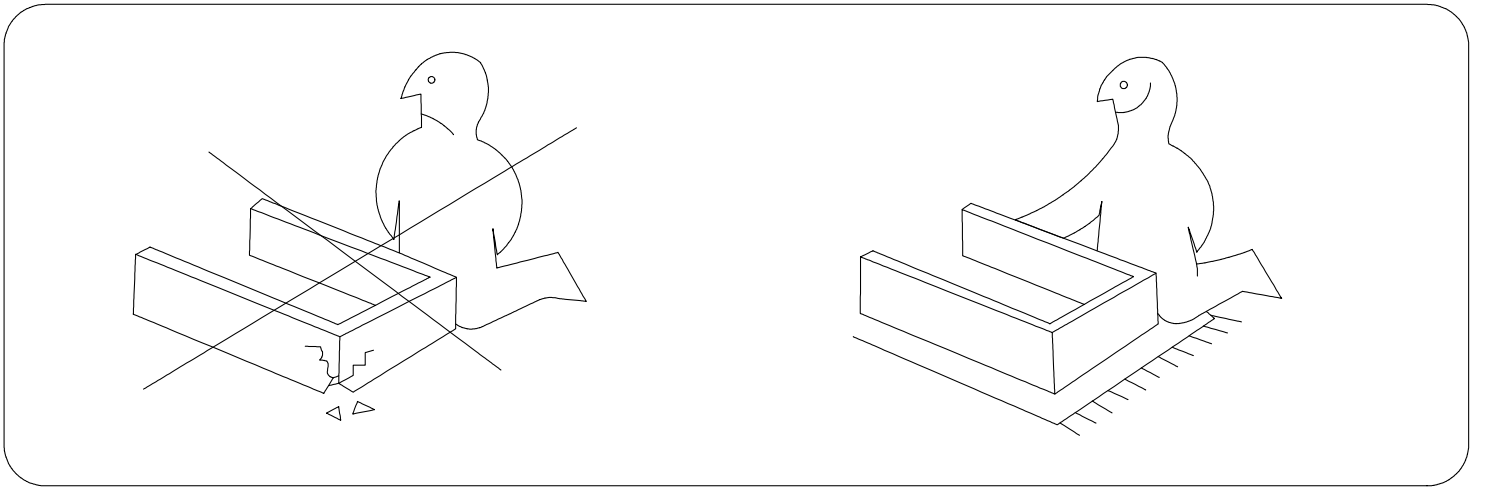
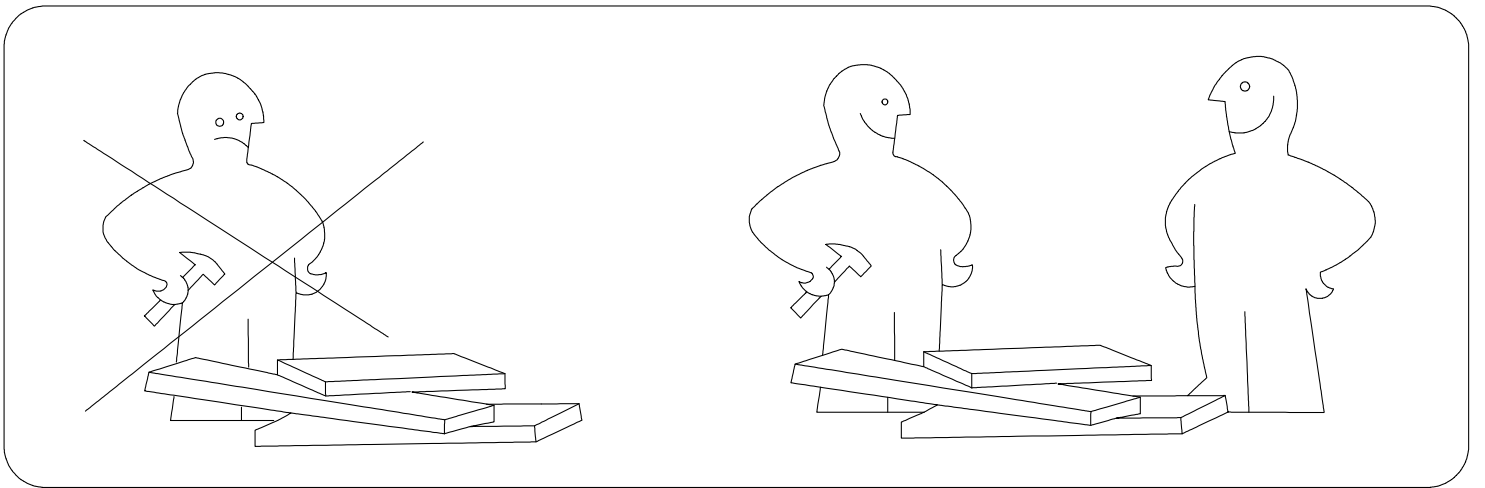



Assembly Instruction

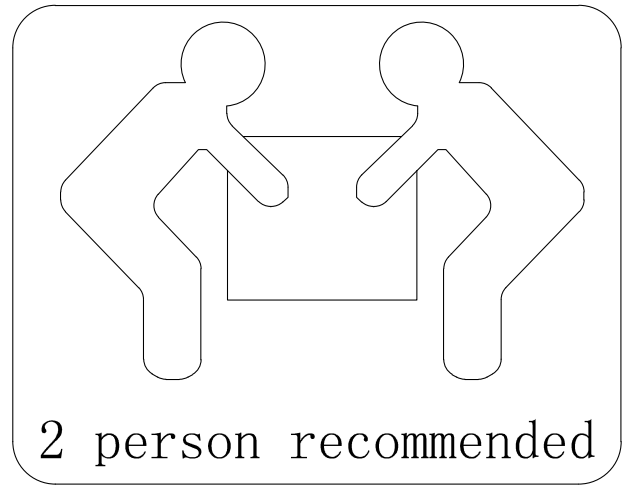

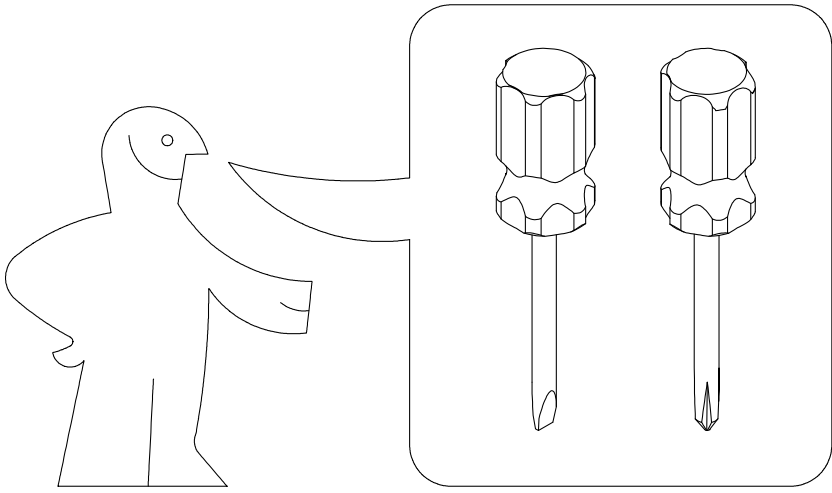

Panel No	Panel Sizes	Quantity
1	600*400*16	1
2	1450*400*16	1
3	1106*382*16	1
4	1106*382*16	1
5	1106*100*16	1
6	1116*243*5	2
7	596*179*16	6


Panel No	Panel Sizes	Quantity
8	516*120*12	6
9	350*120*12	6
10	350*120*12	6
11	526*348*5	6
12	1448*60*16	2
13	363*60*16	3
14	Φ396*12	1

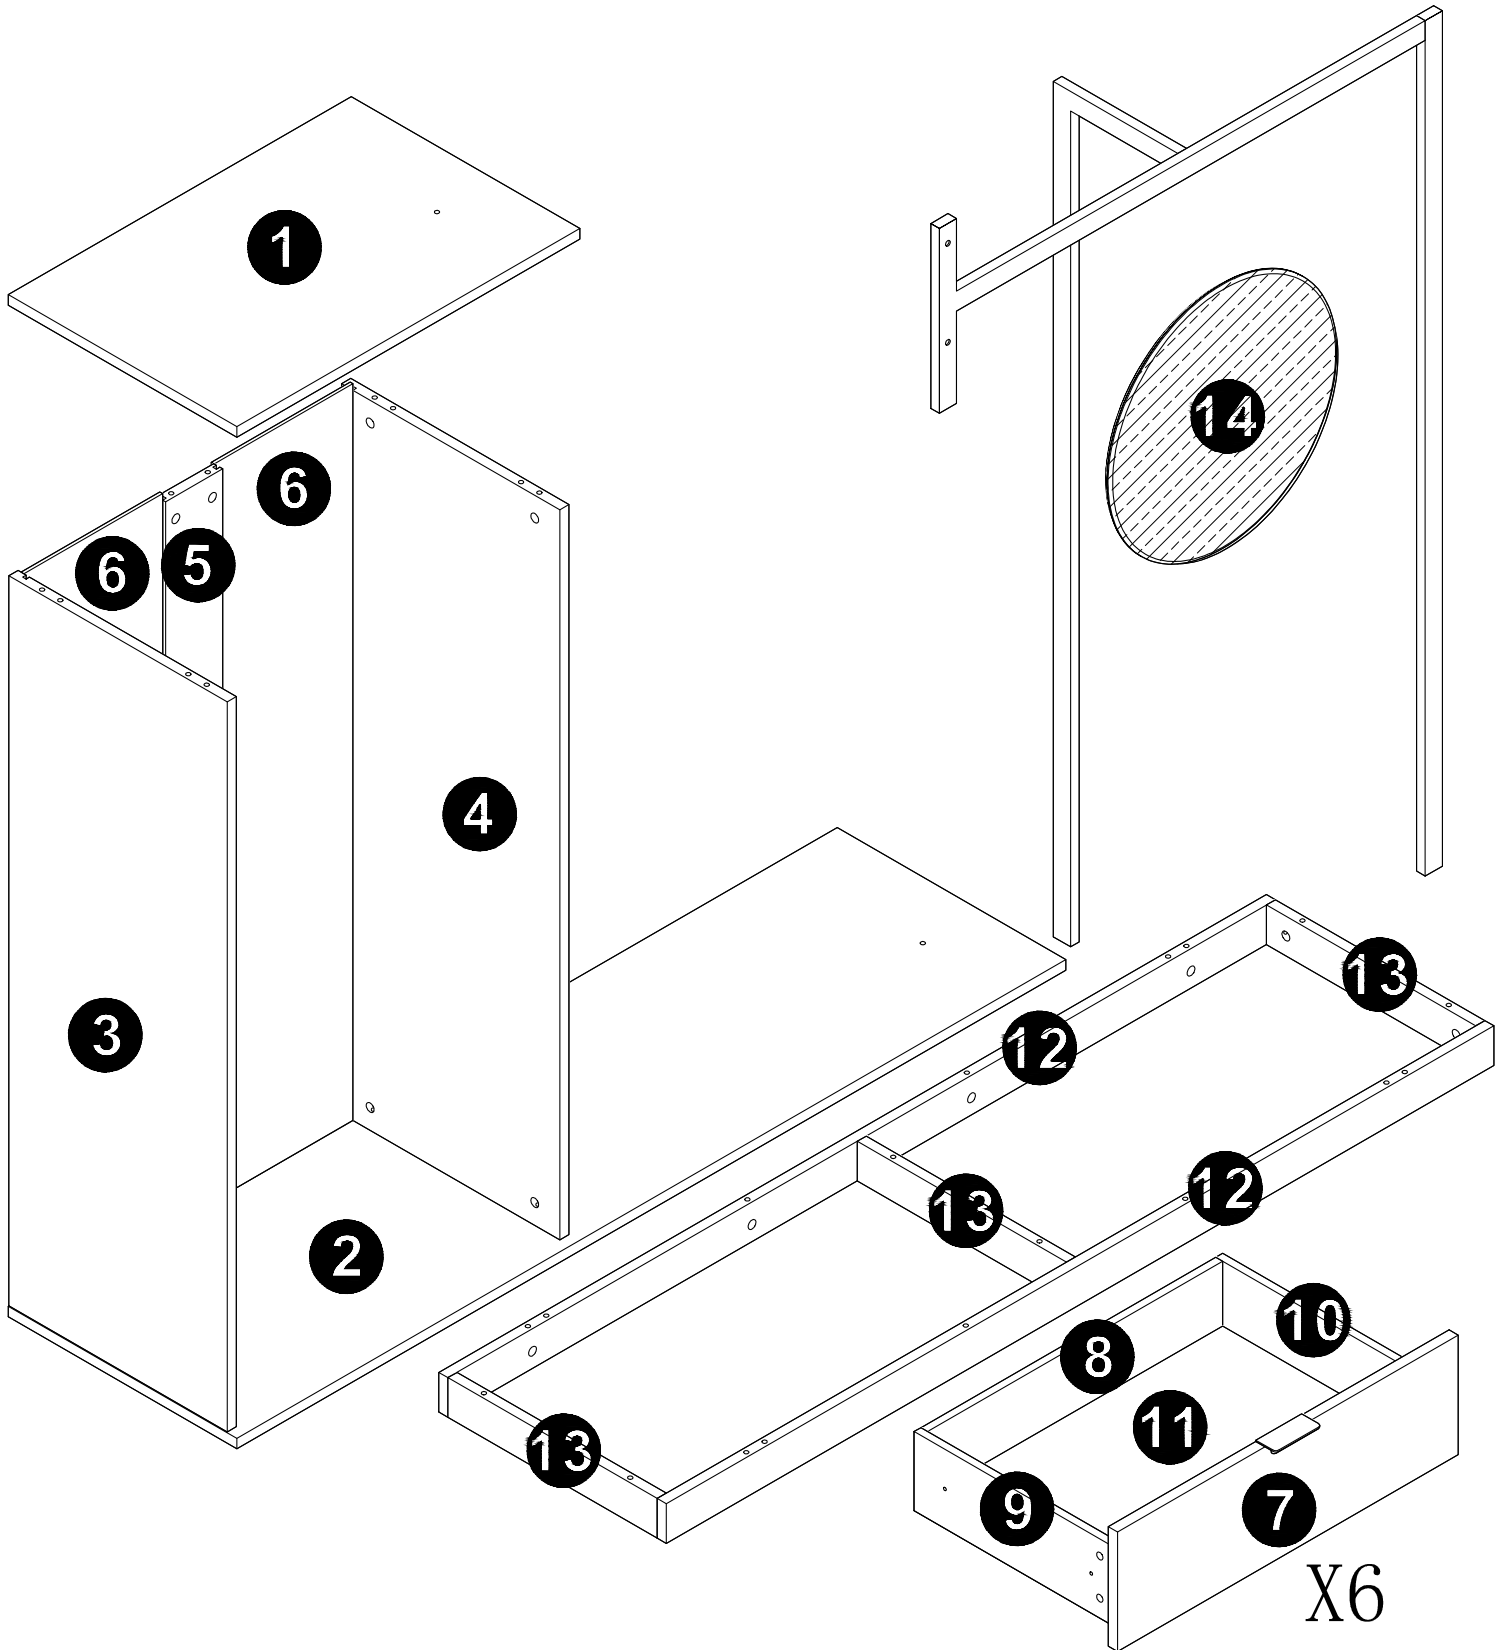


Fittings



A=29



B=22

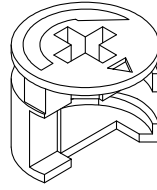


C=29




D1=29




D2=48

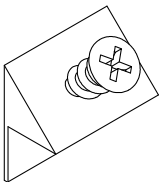

E=12

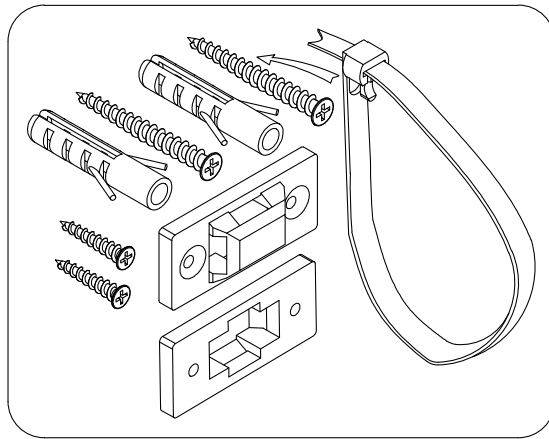


F=2



M6*12

G1=4

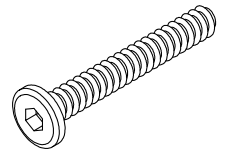


M6*25

G2=5




H=1

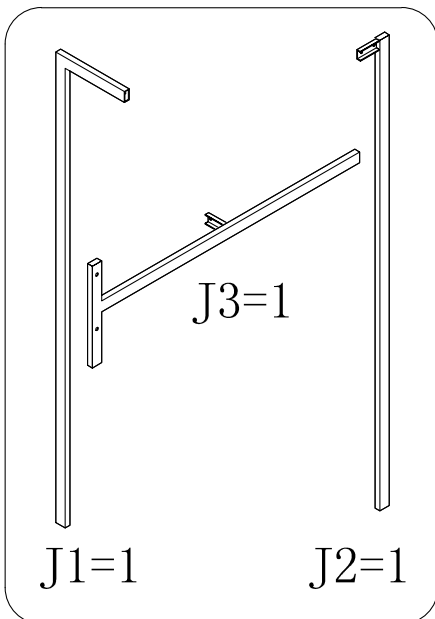


J1=1

J2=1

J3=1

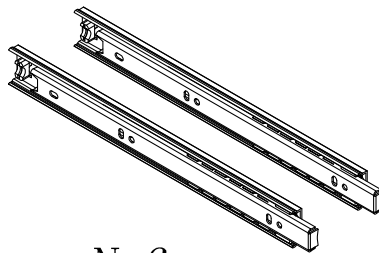

N=6

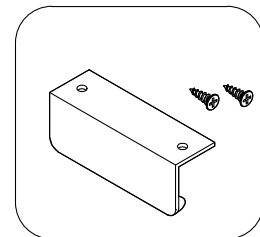

U=6



O=48







P=48




M3.5*12

V1=48


STEP 1

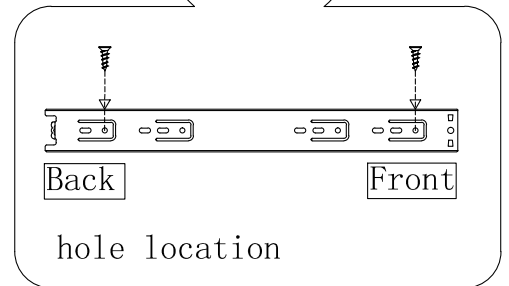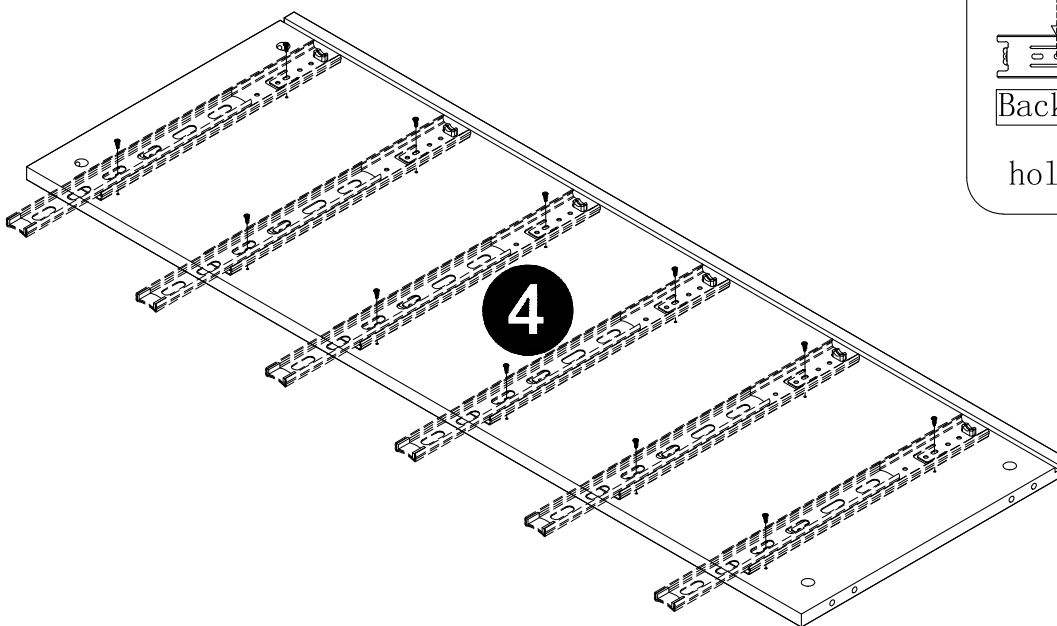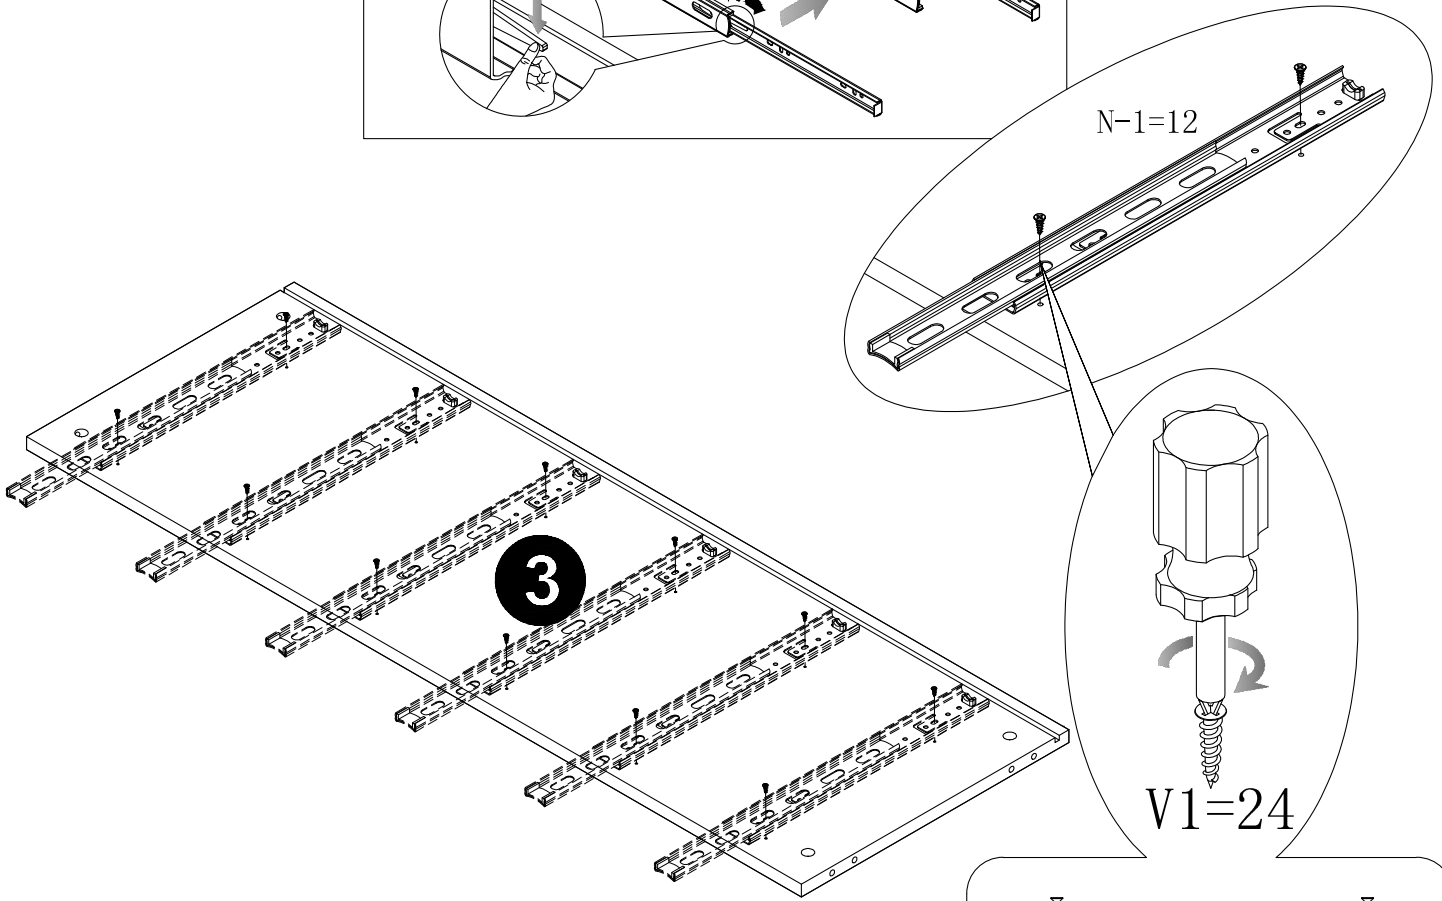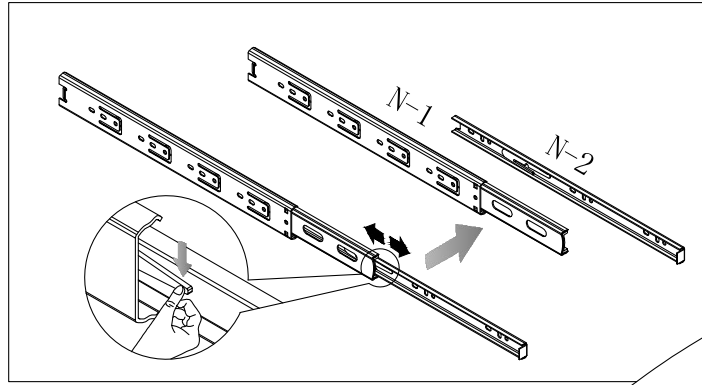


STEP 2

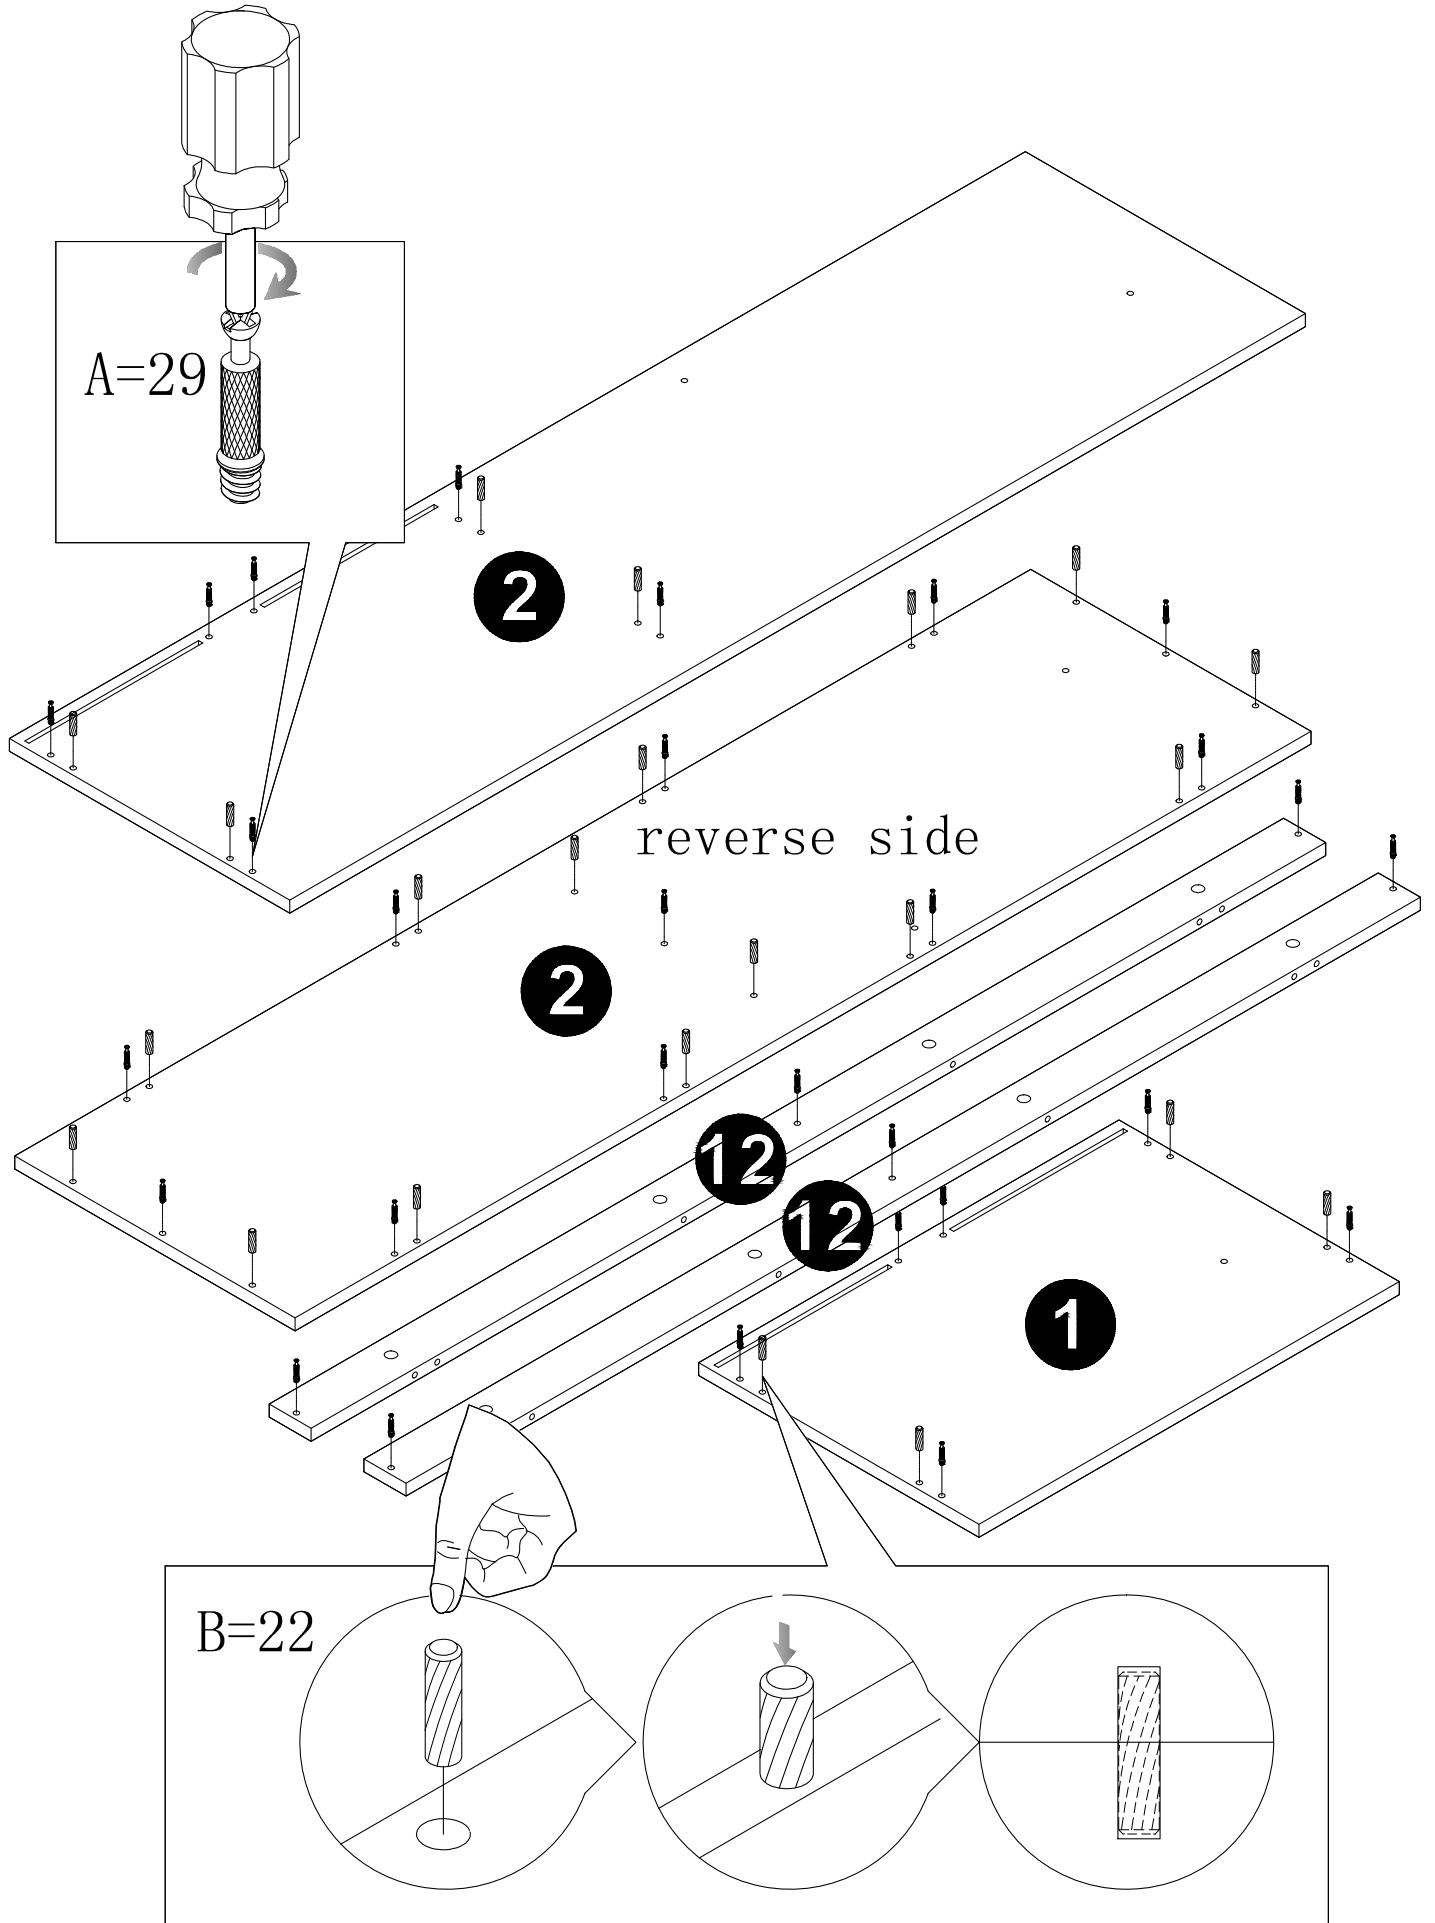


STEP 3

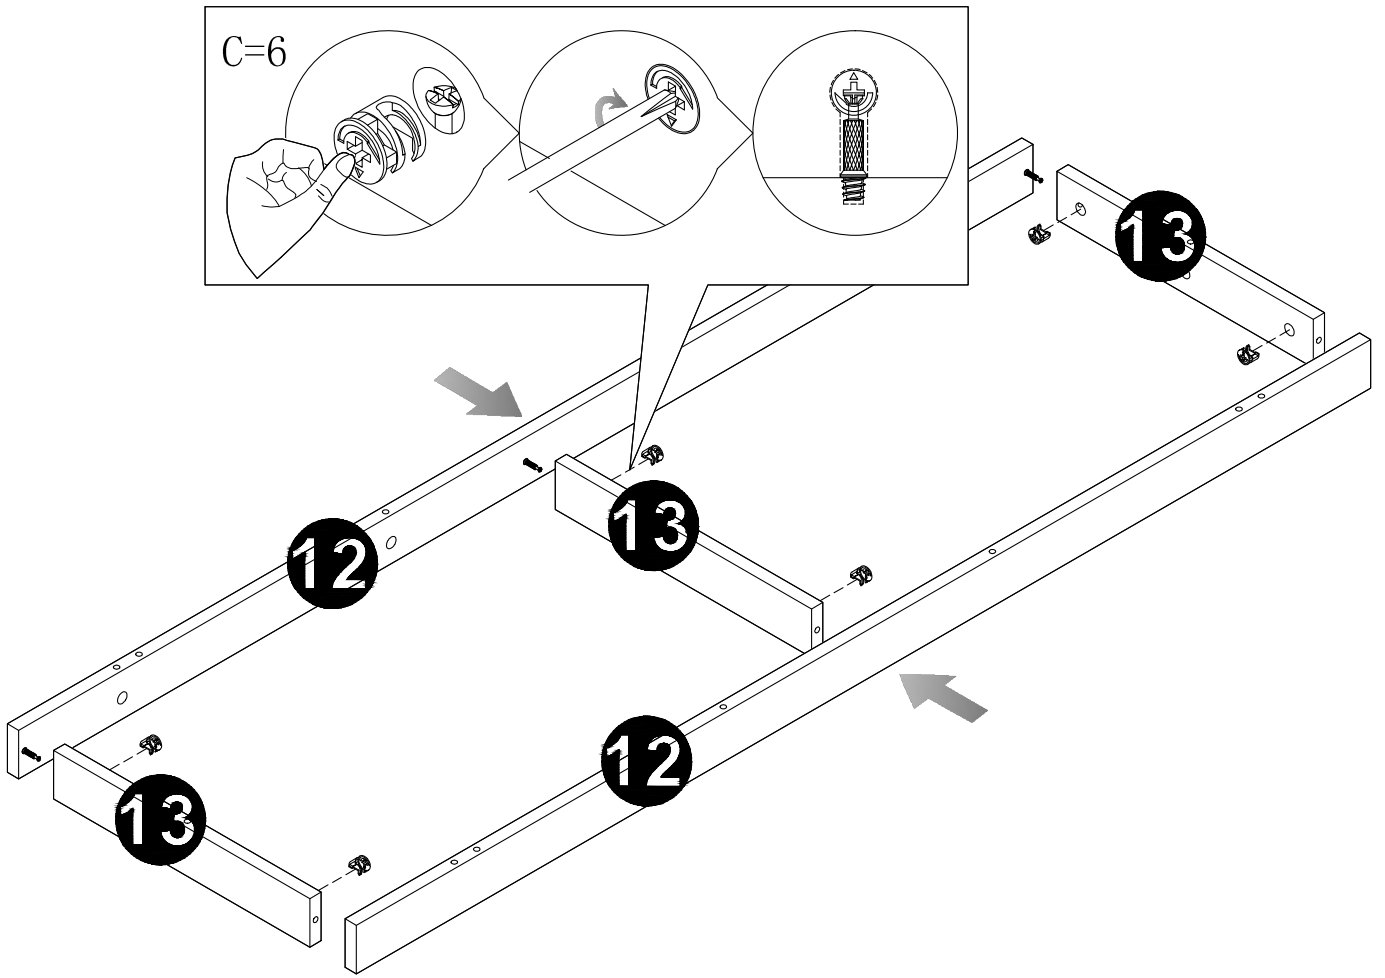


STEP 4

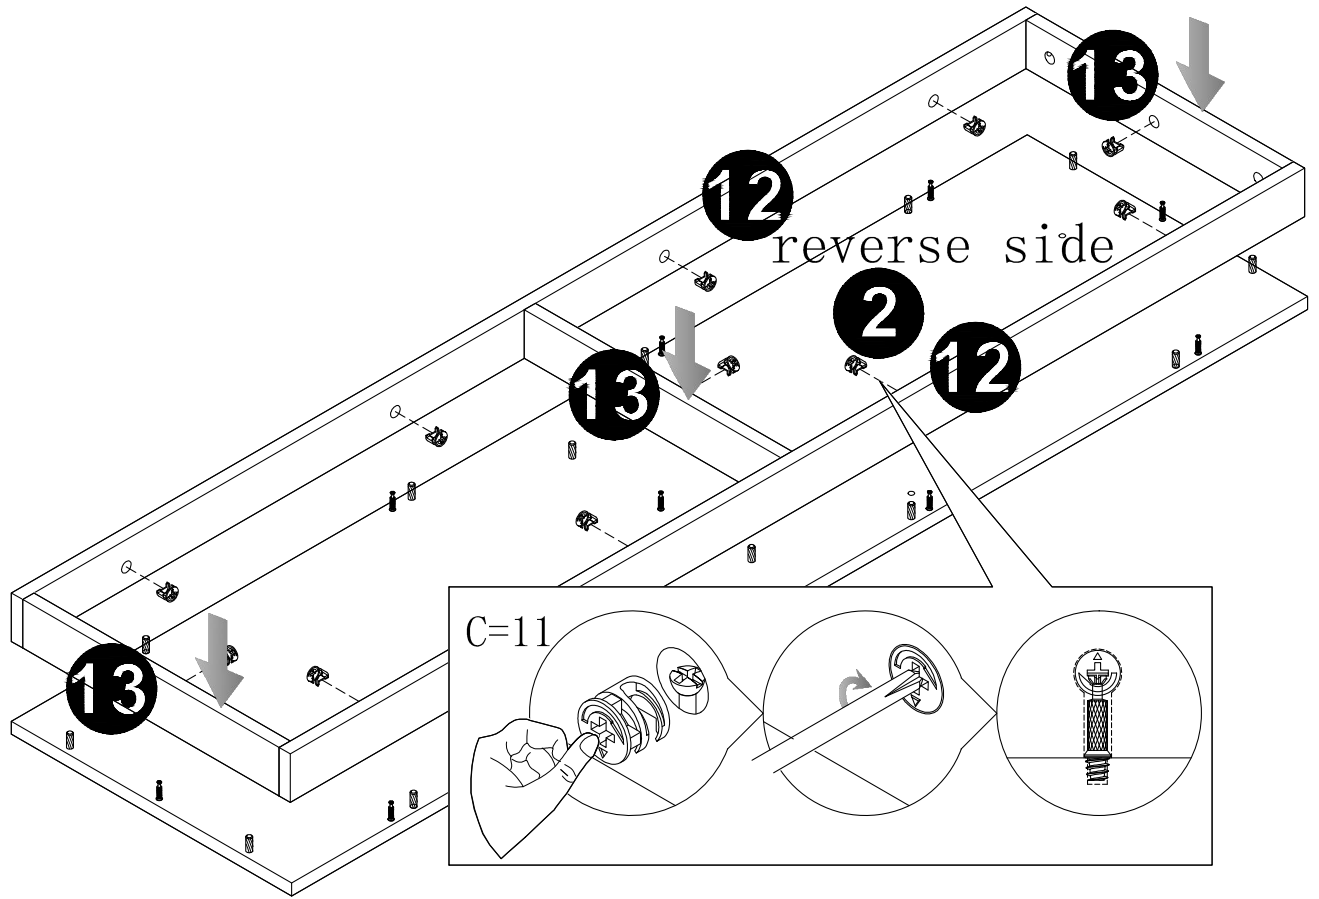


STEP 5

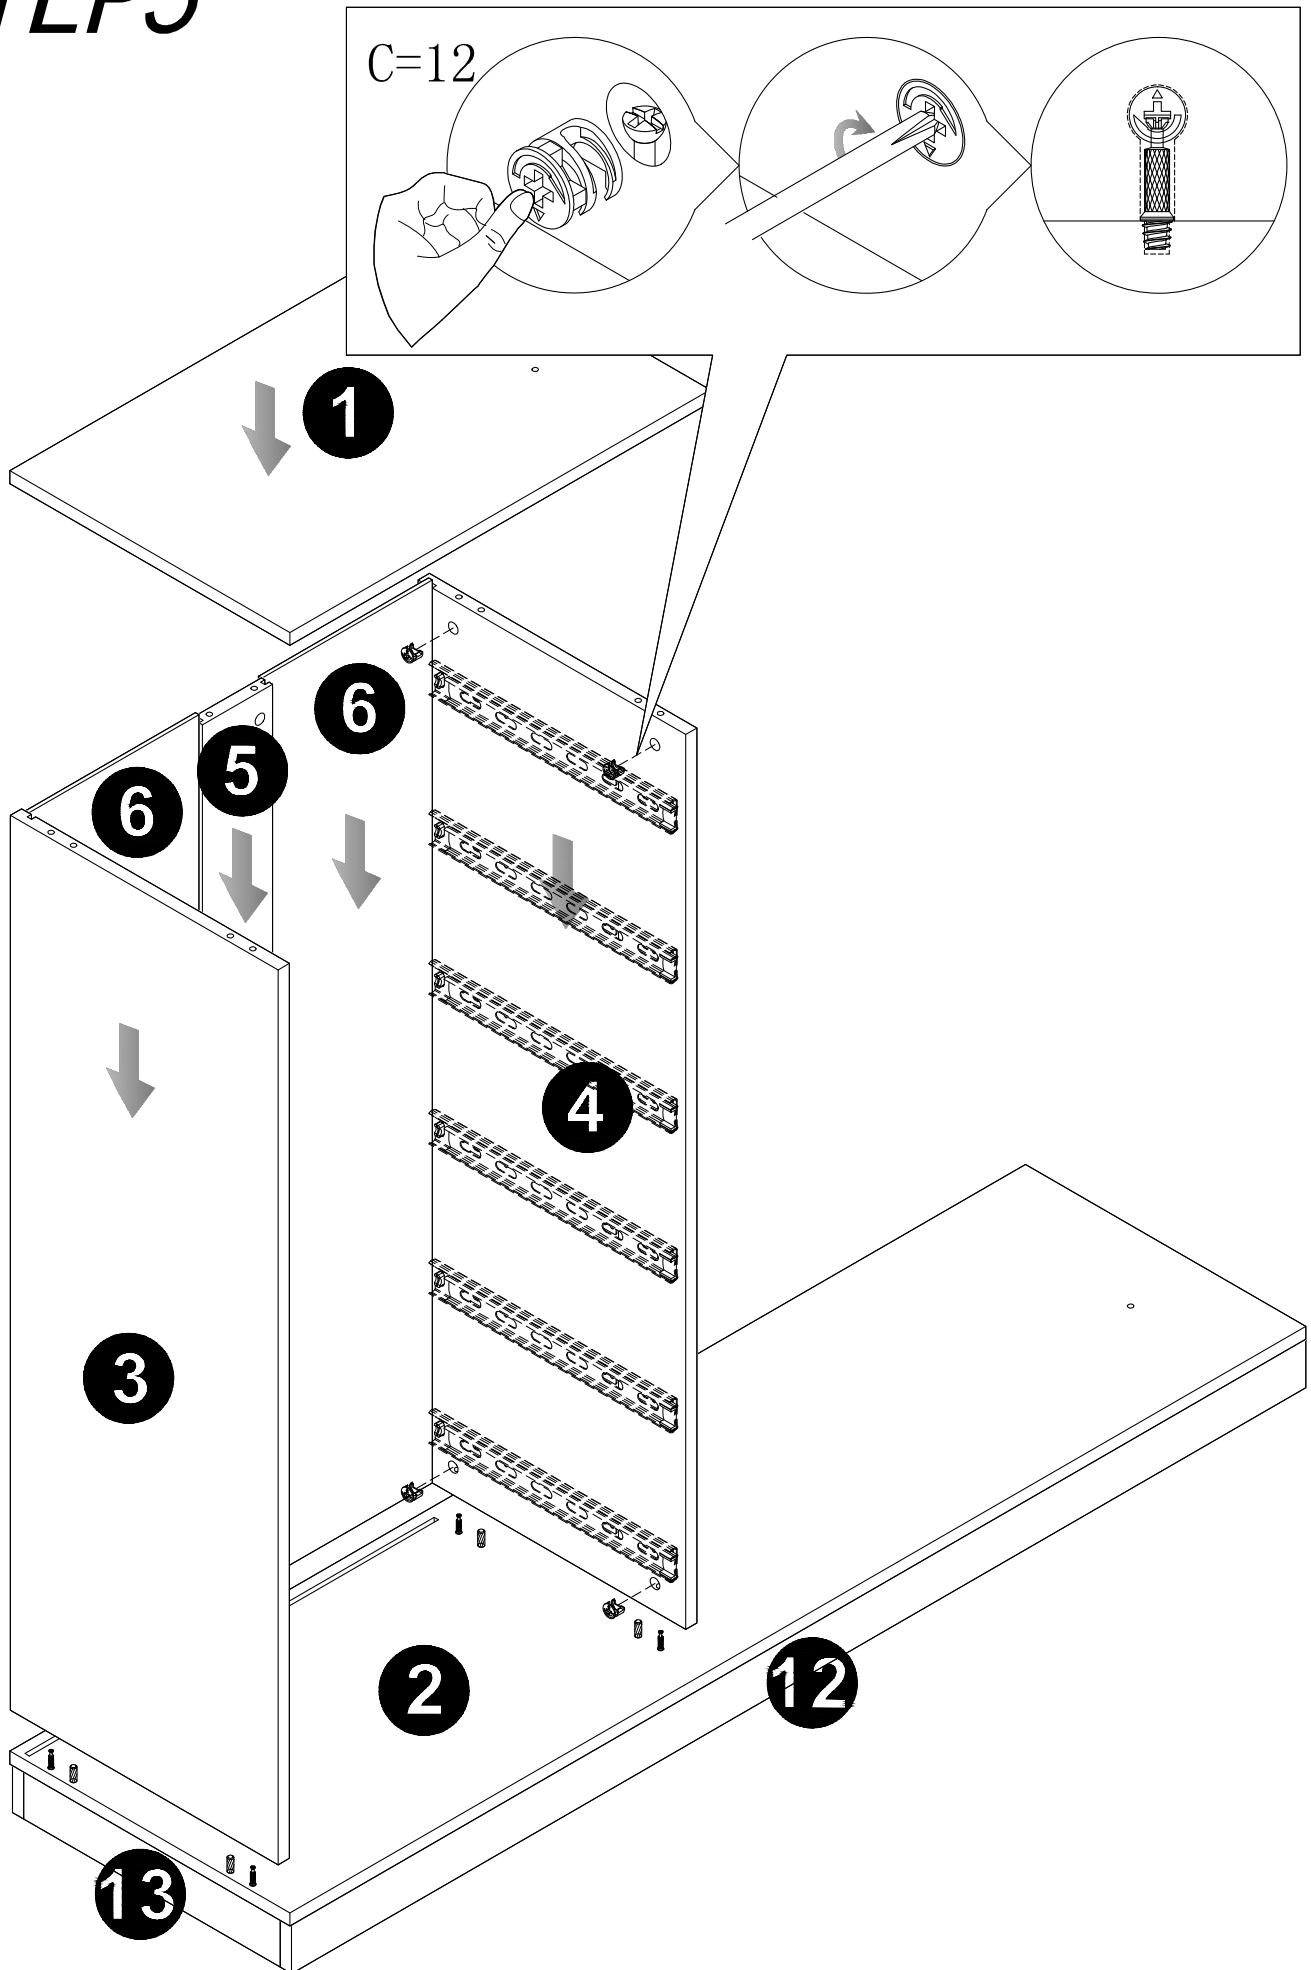


STEP 6

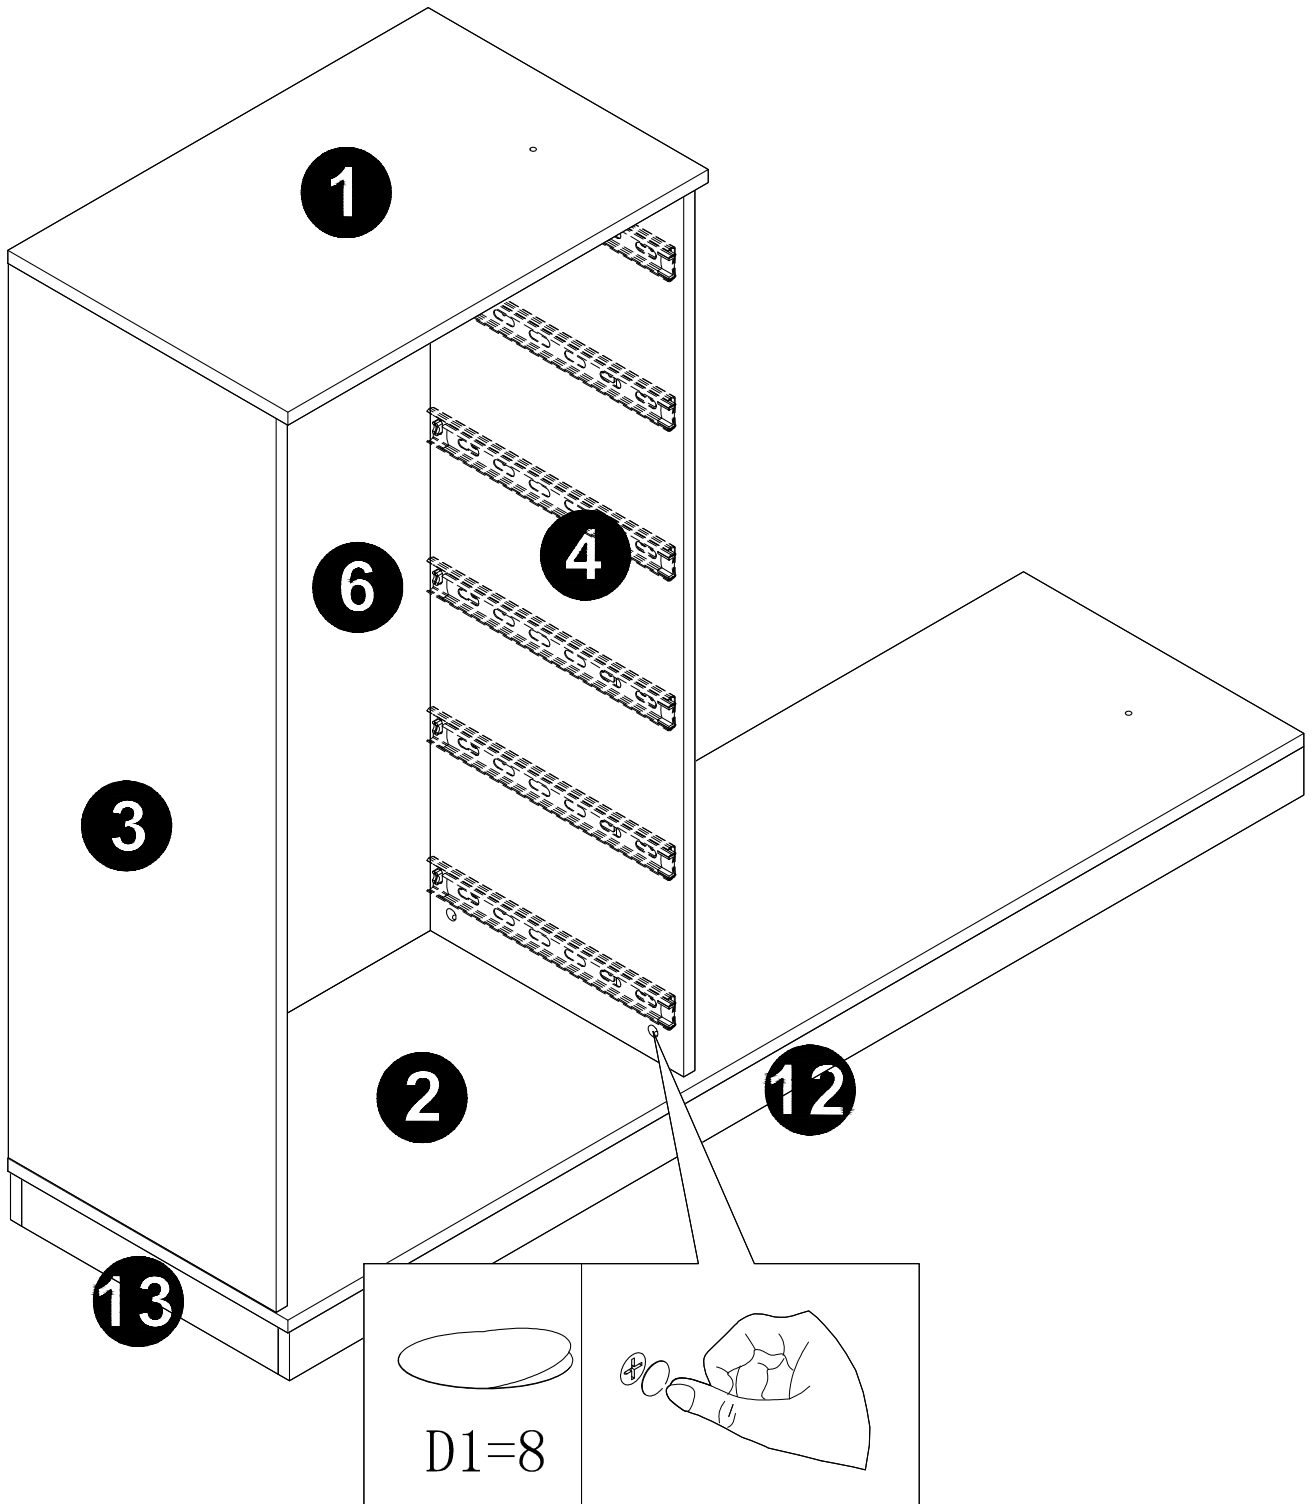


STEP 7

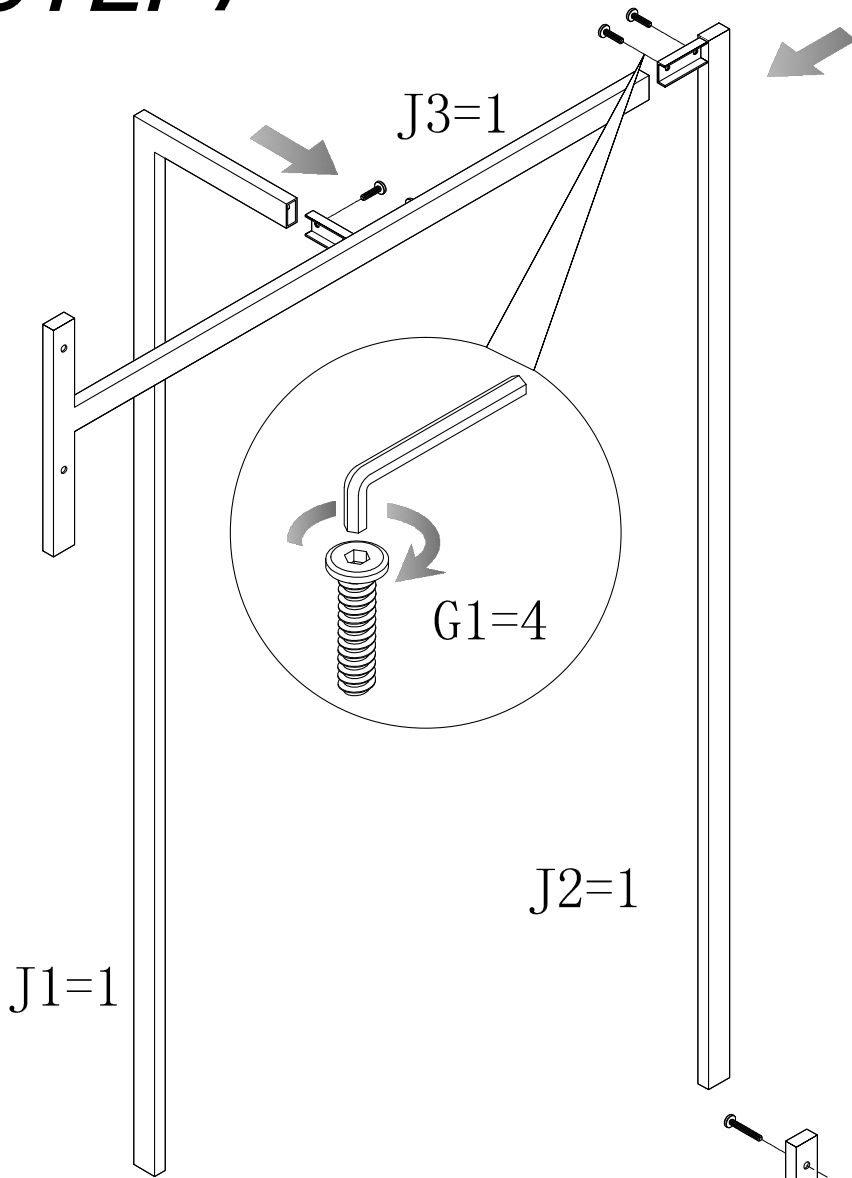


STEP 8

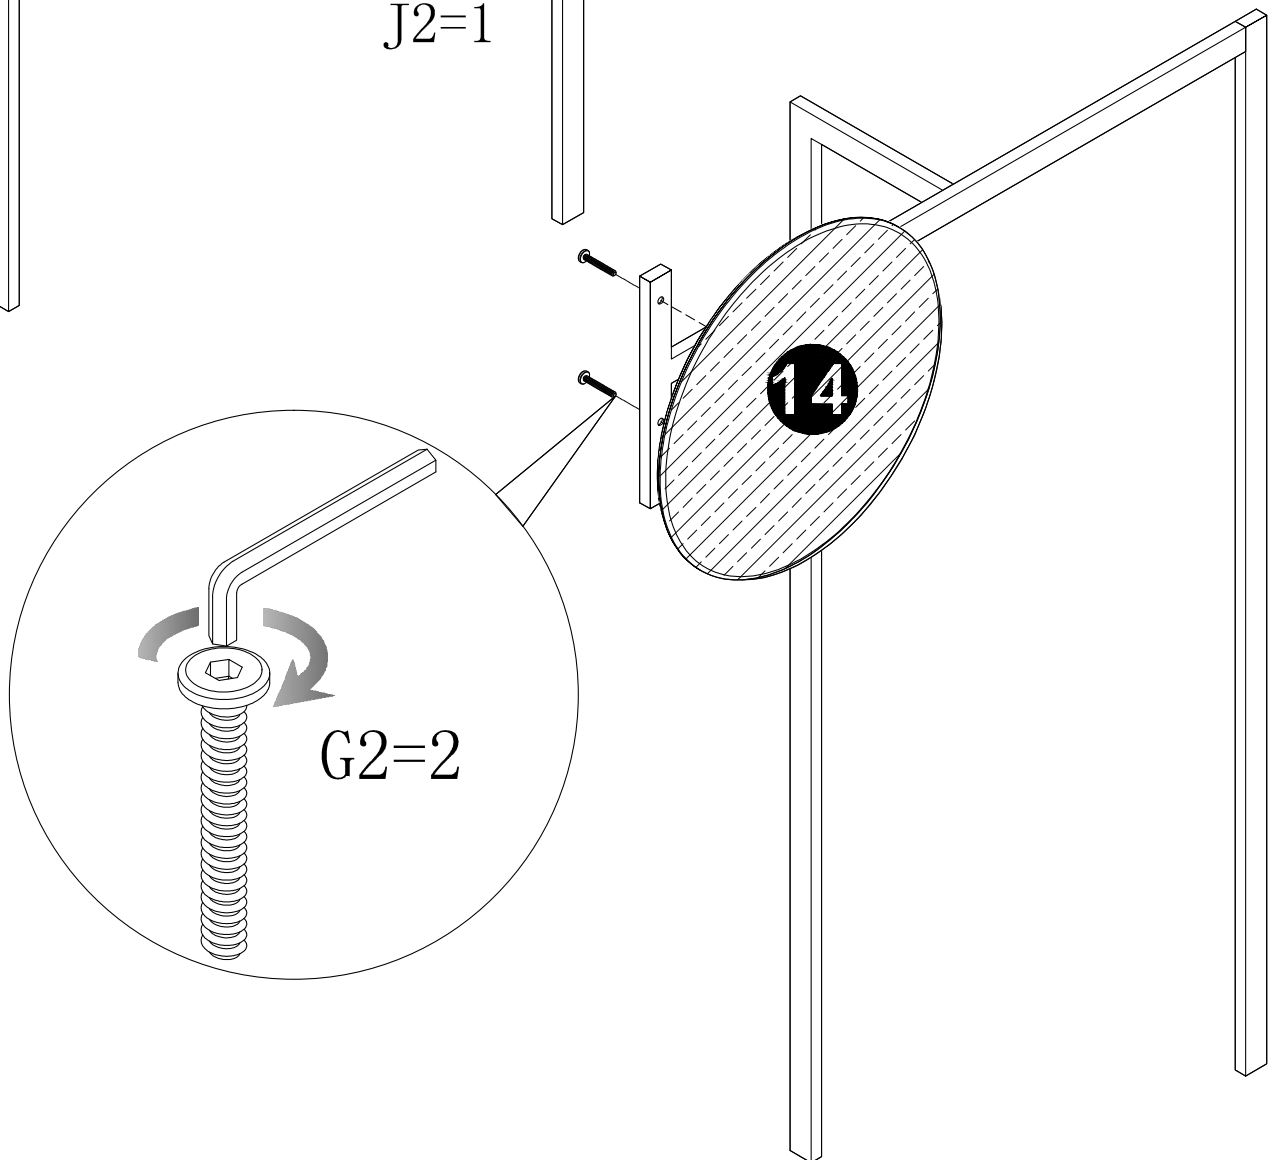


STEP 9

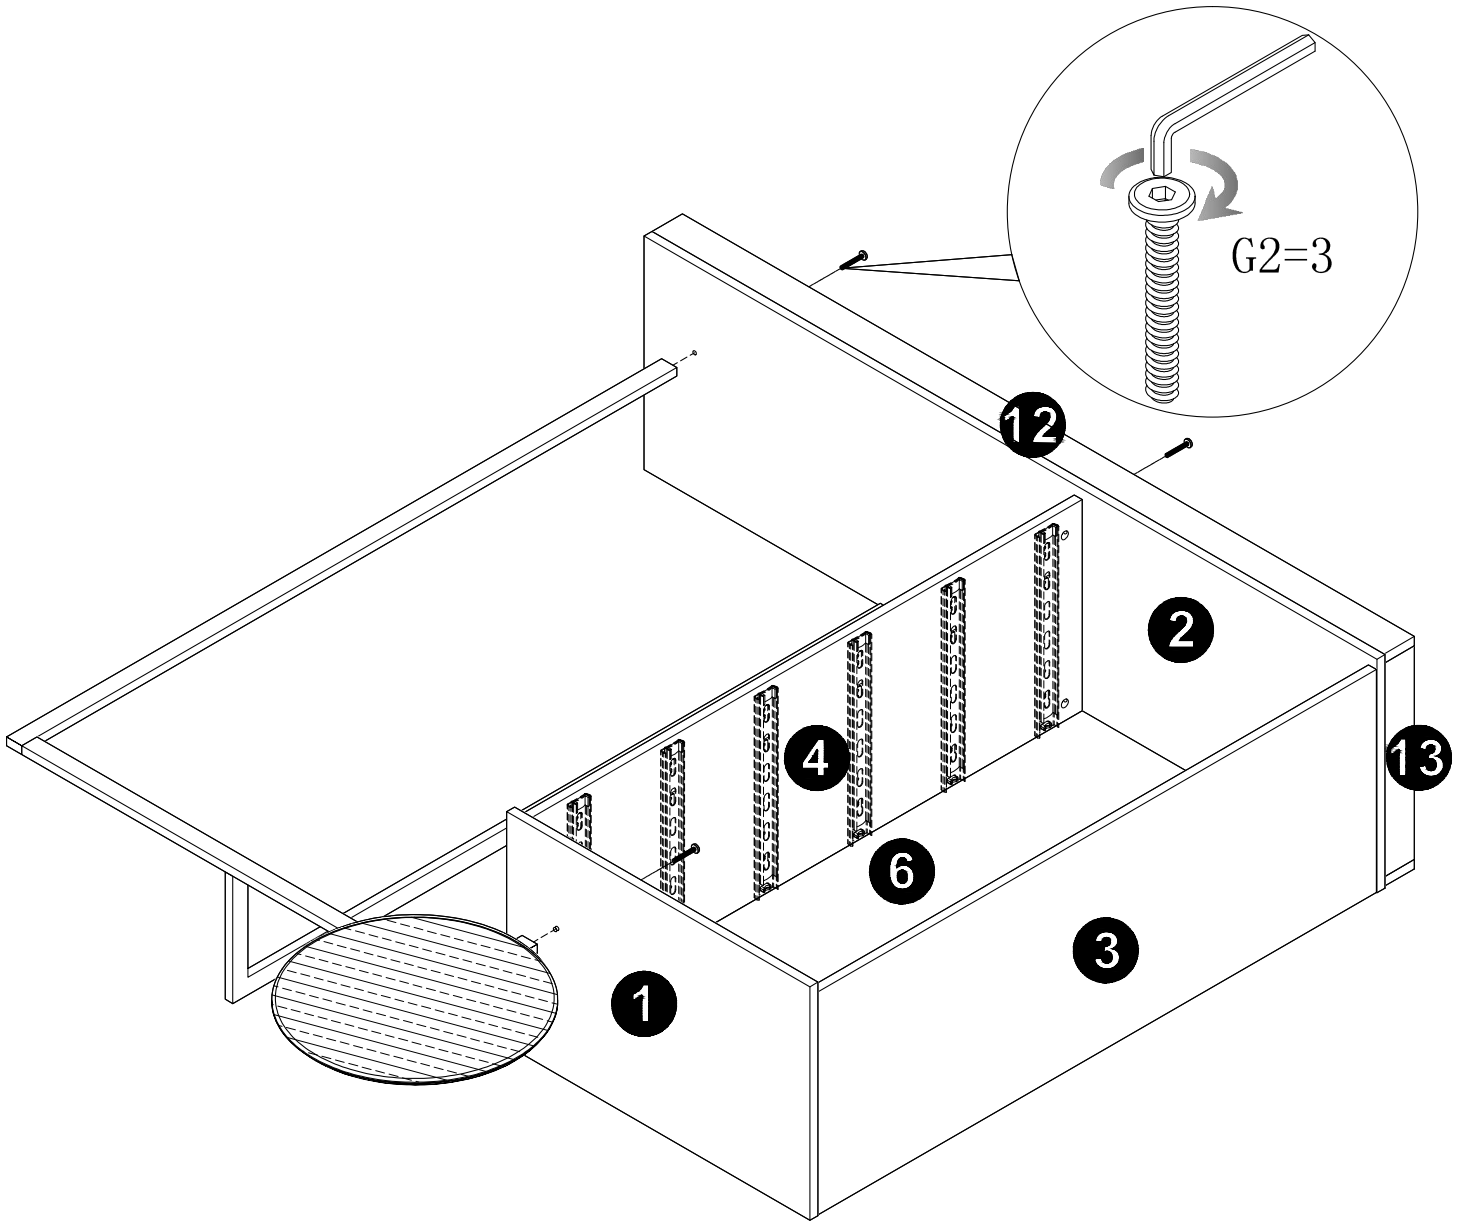


STEP 11

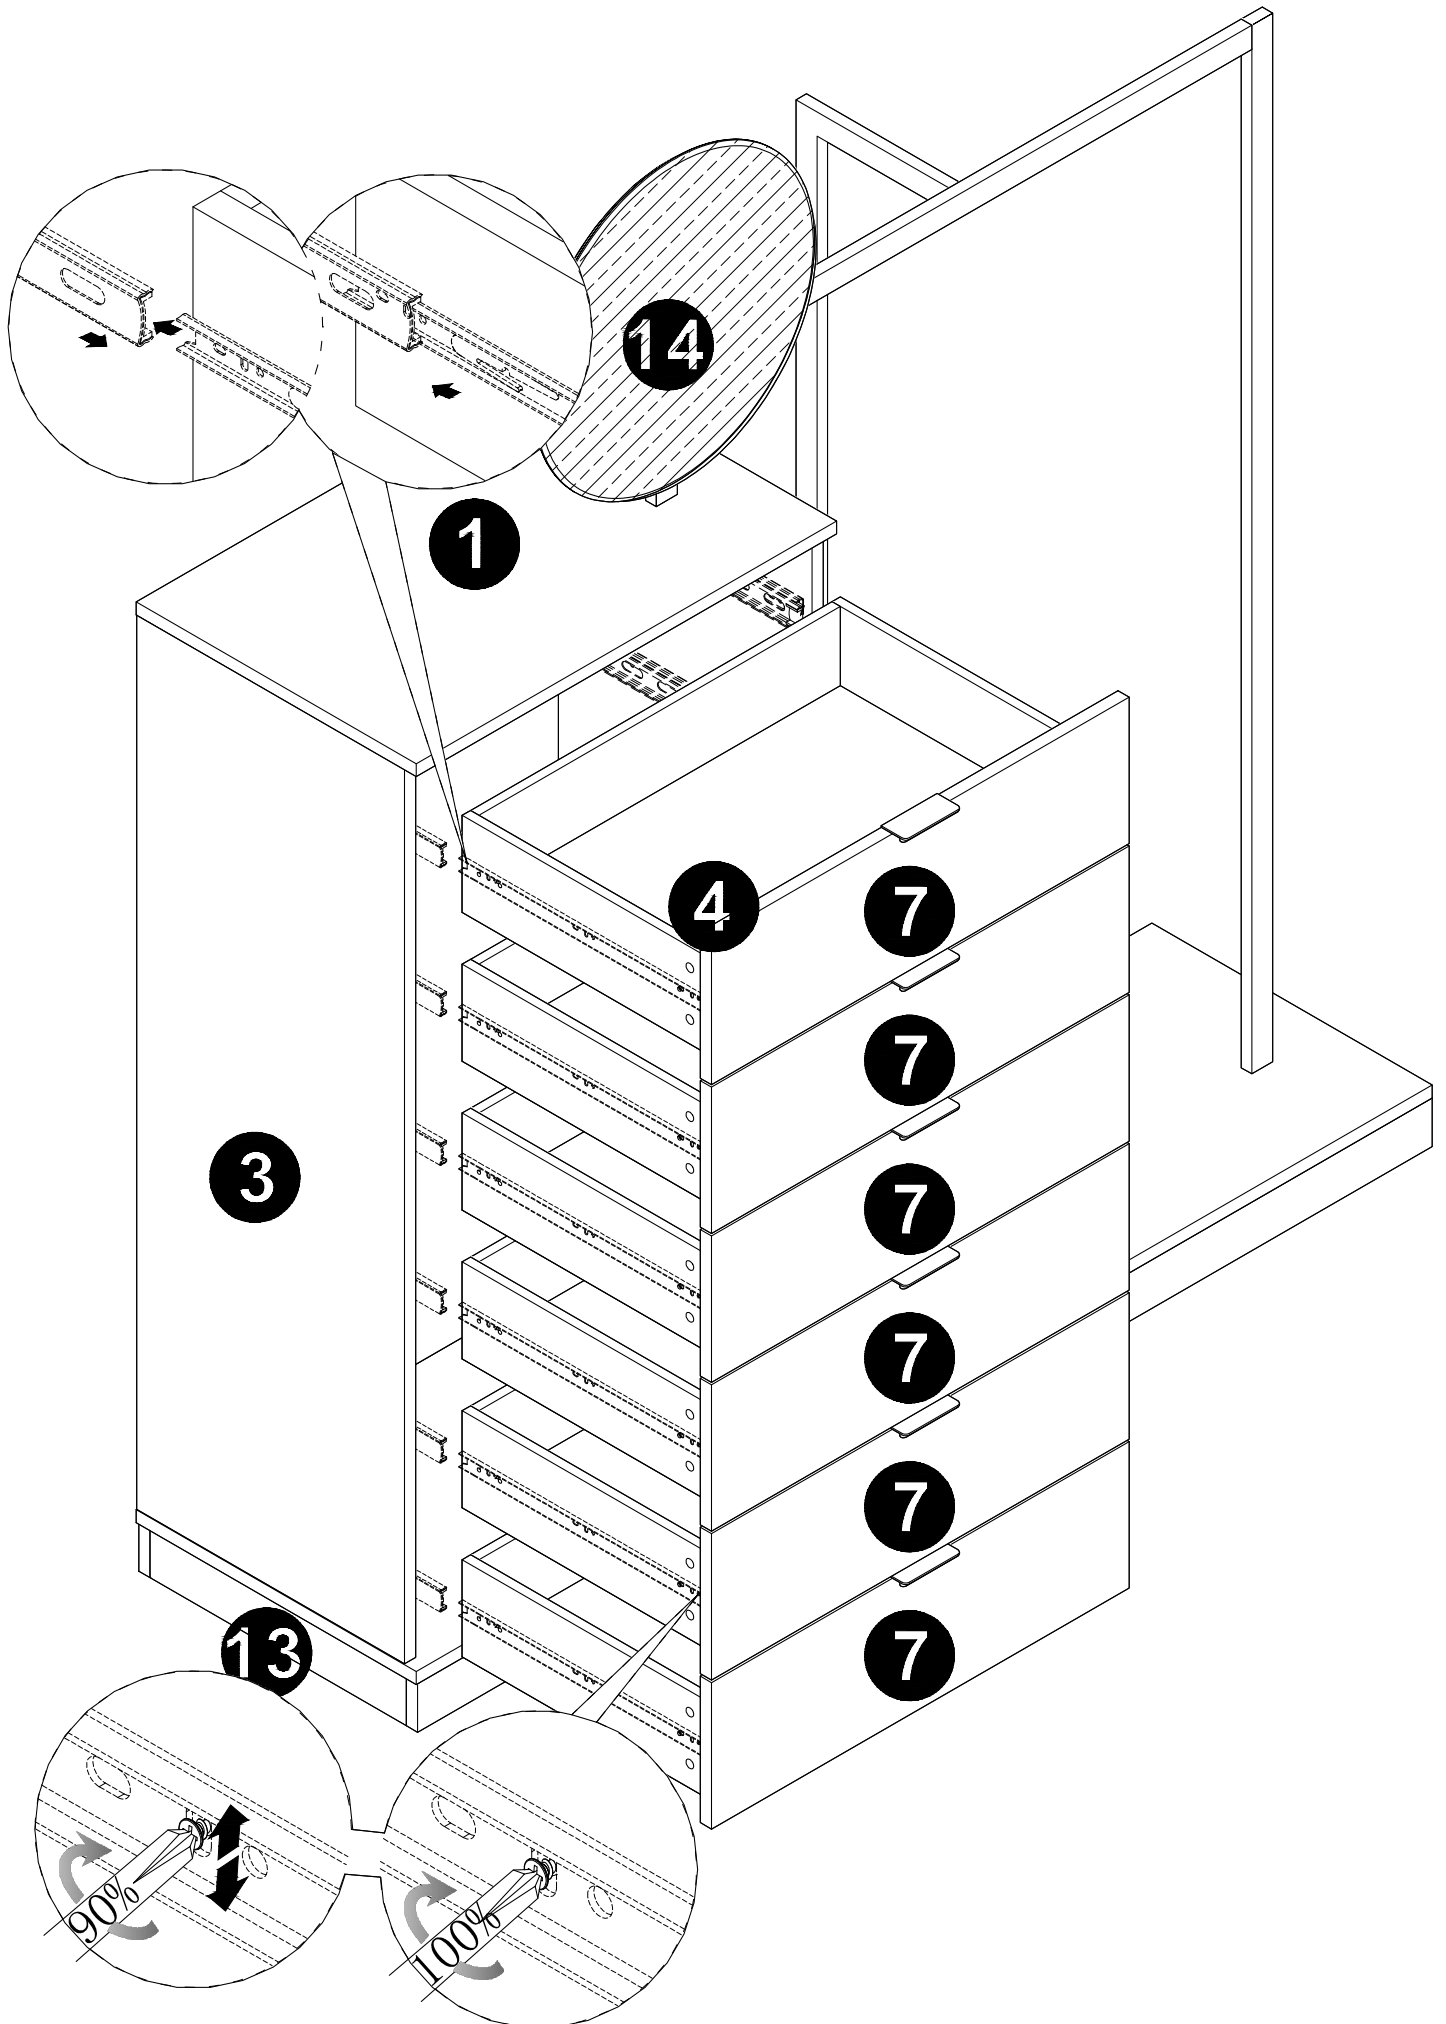


STEP 12

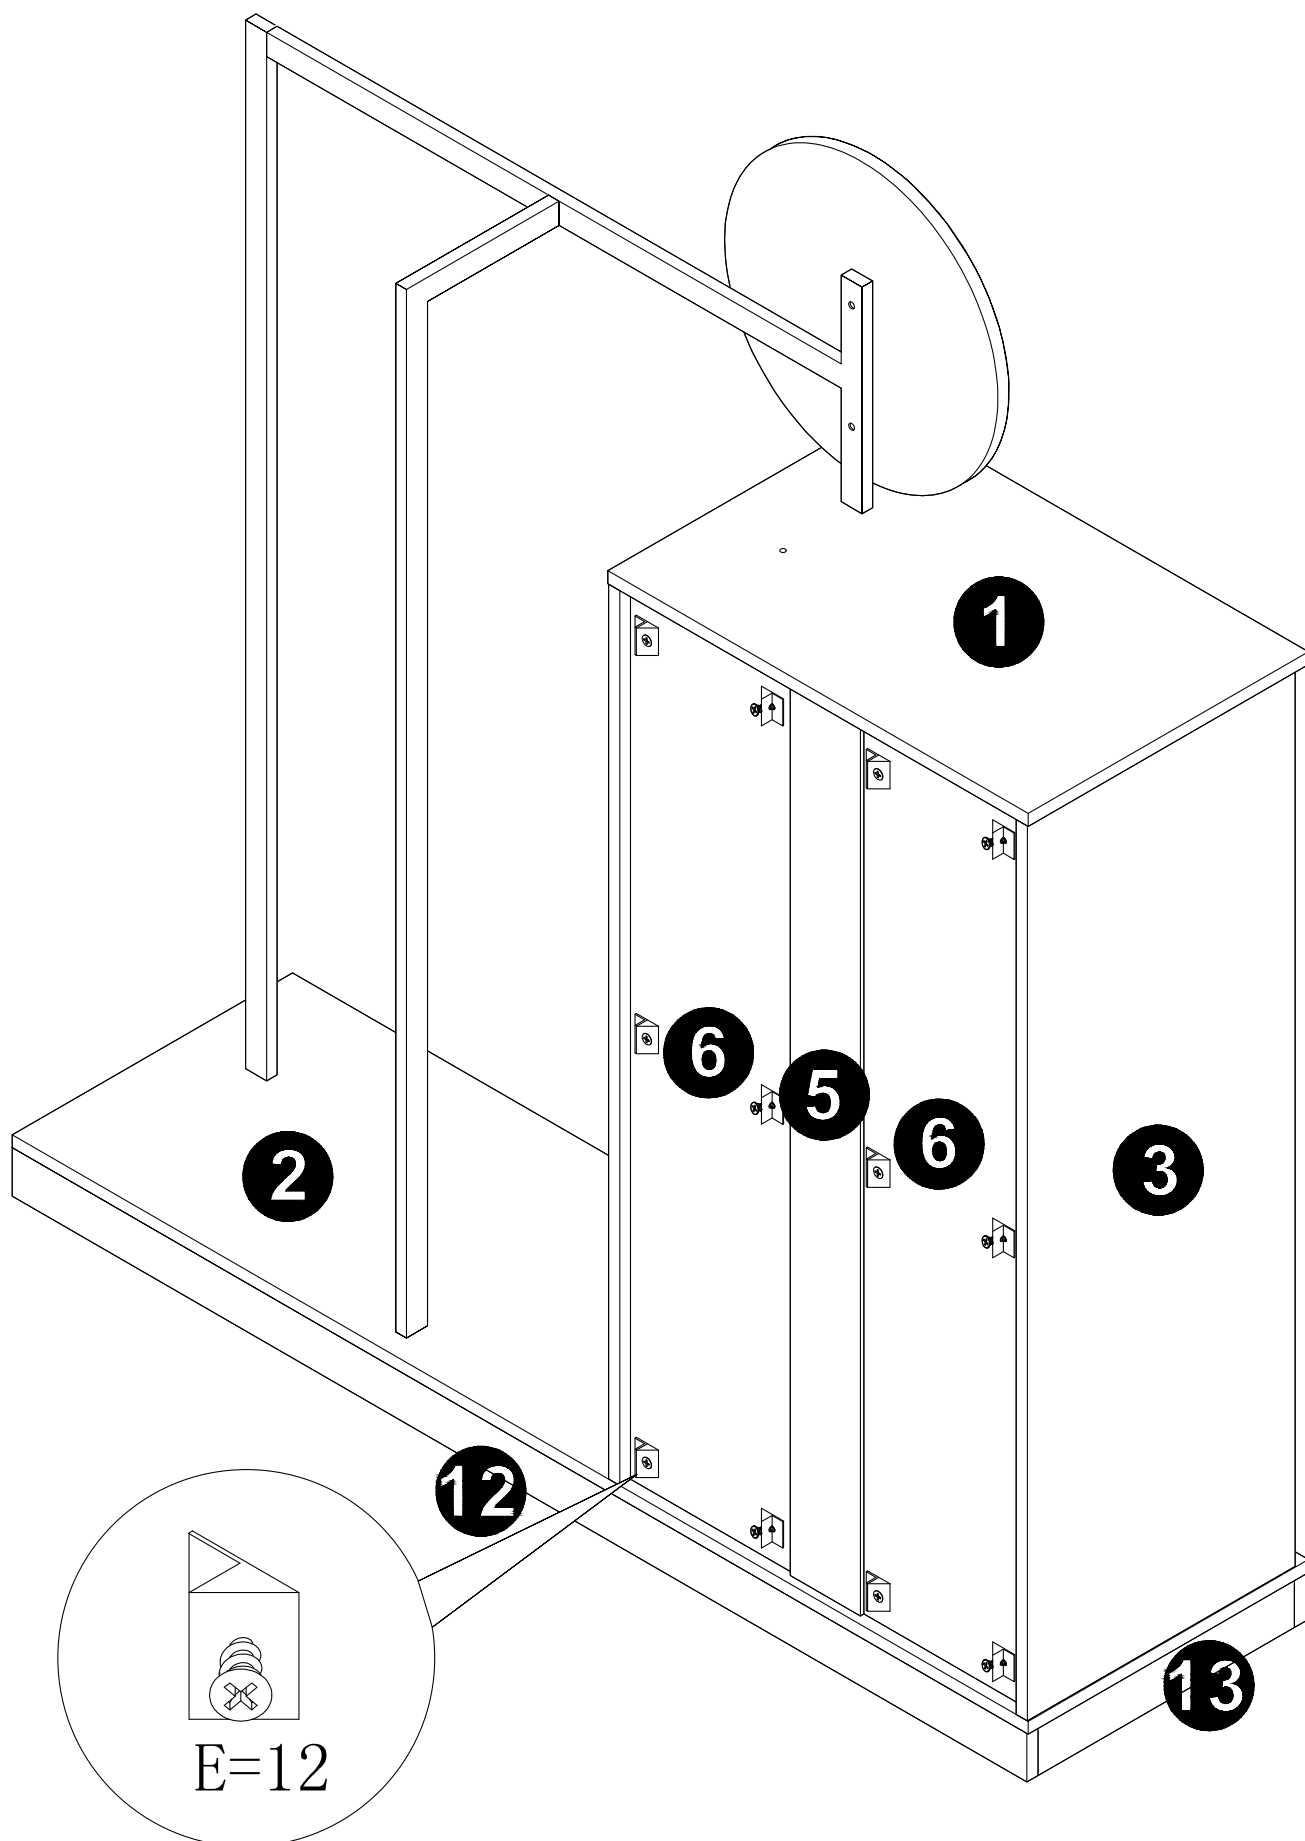

STEP 13

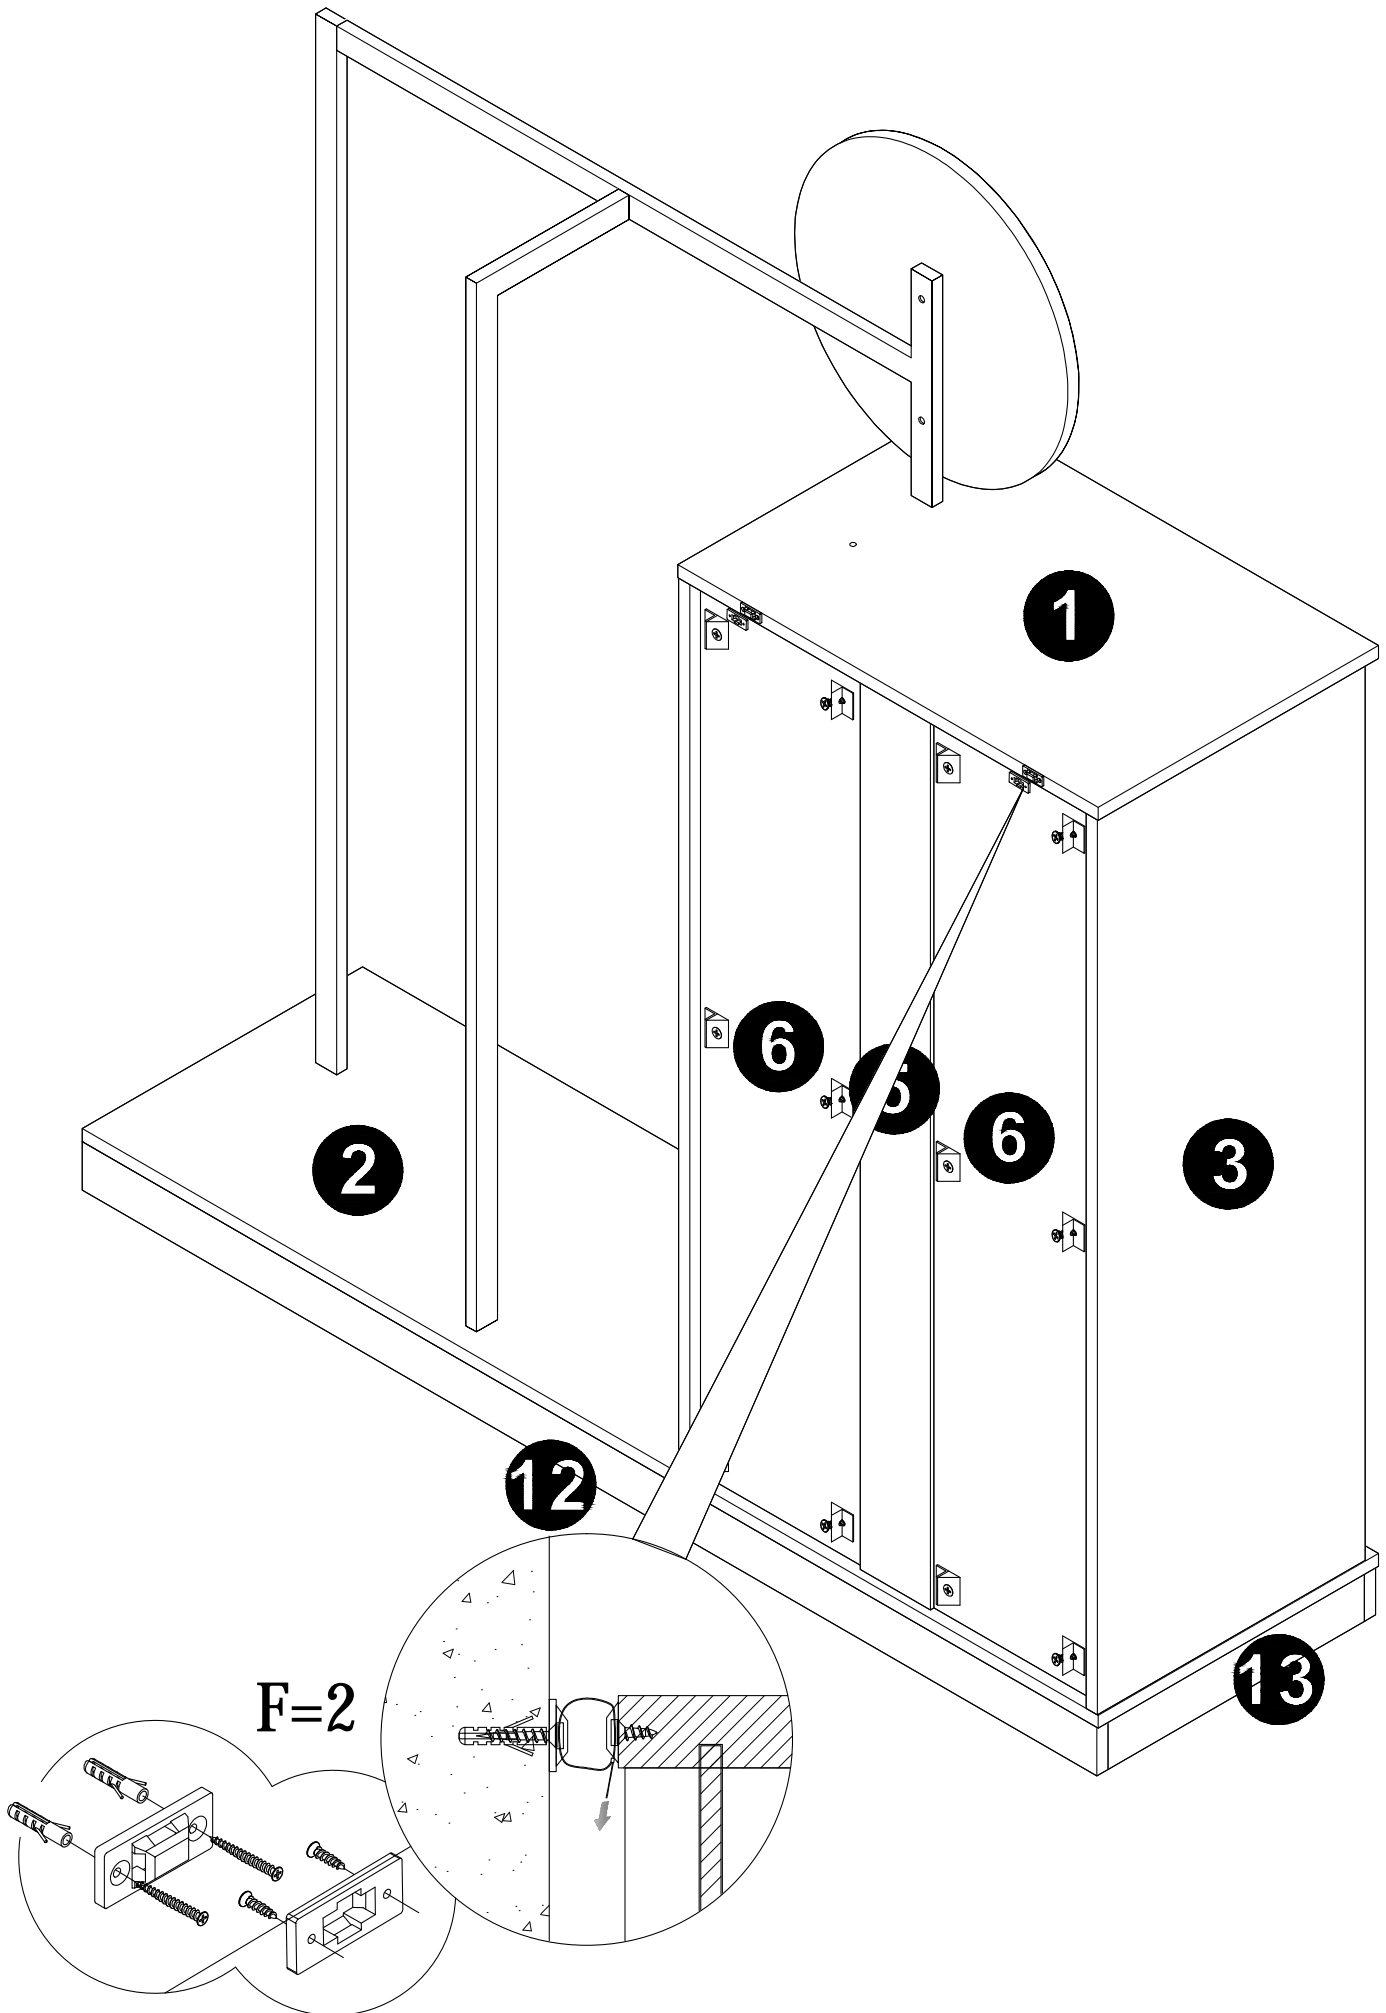


STEP14

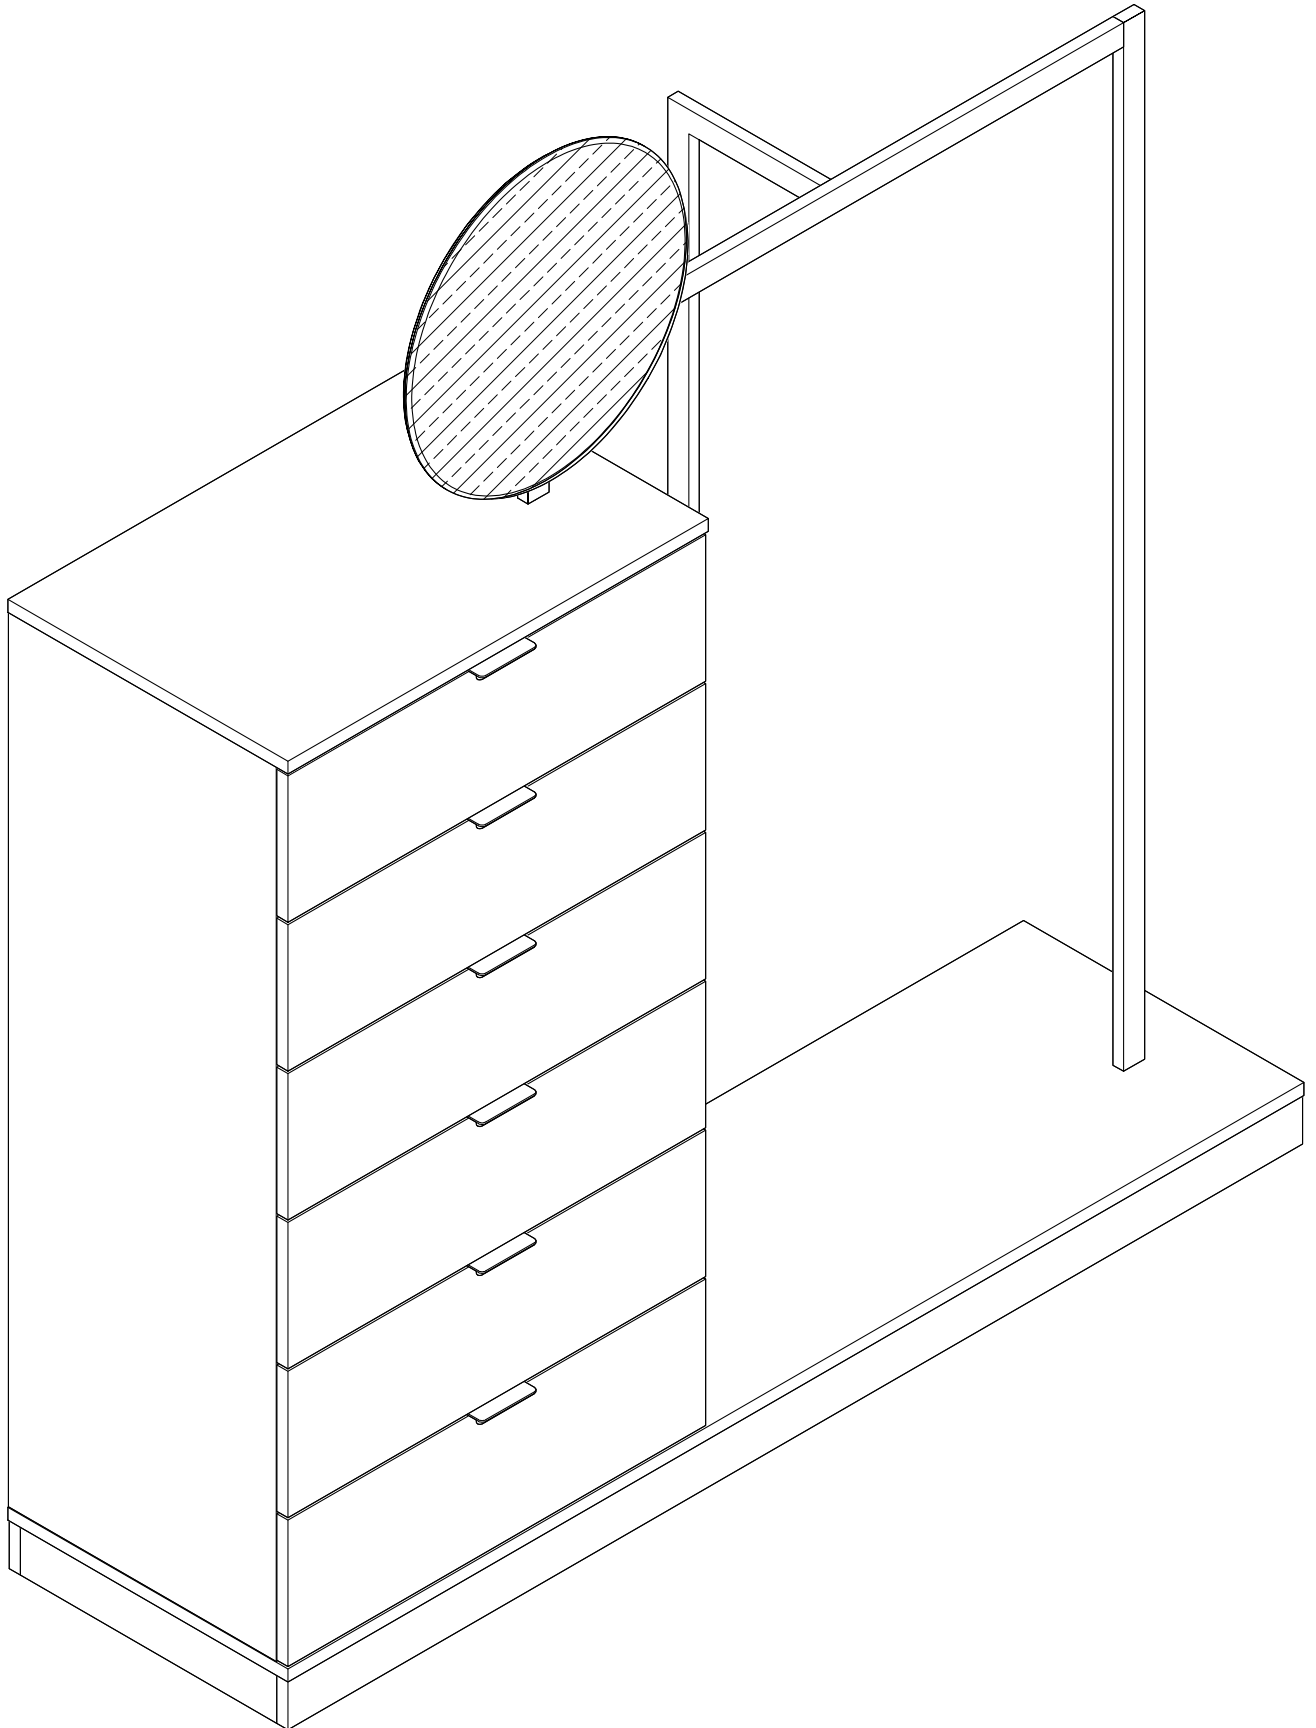

FINISH


诺娃六抽柜三胺邮购包装1

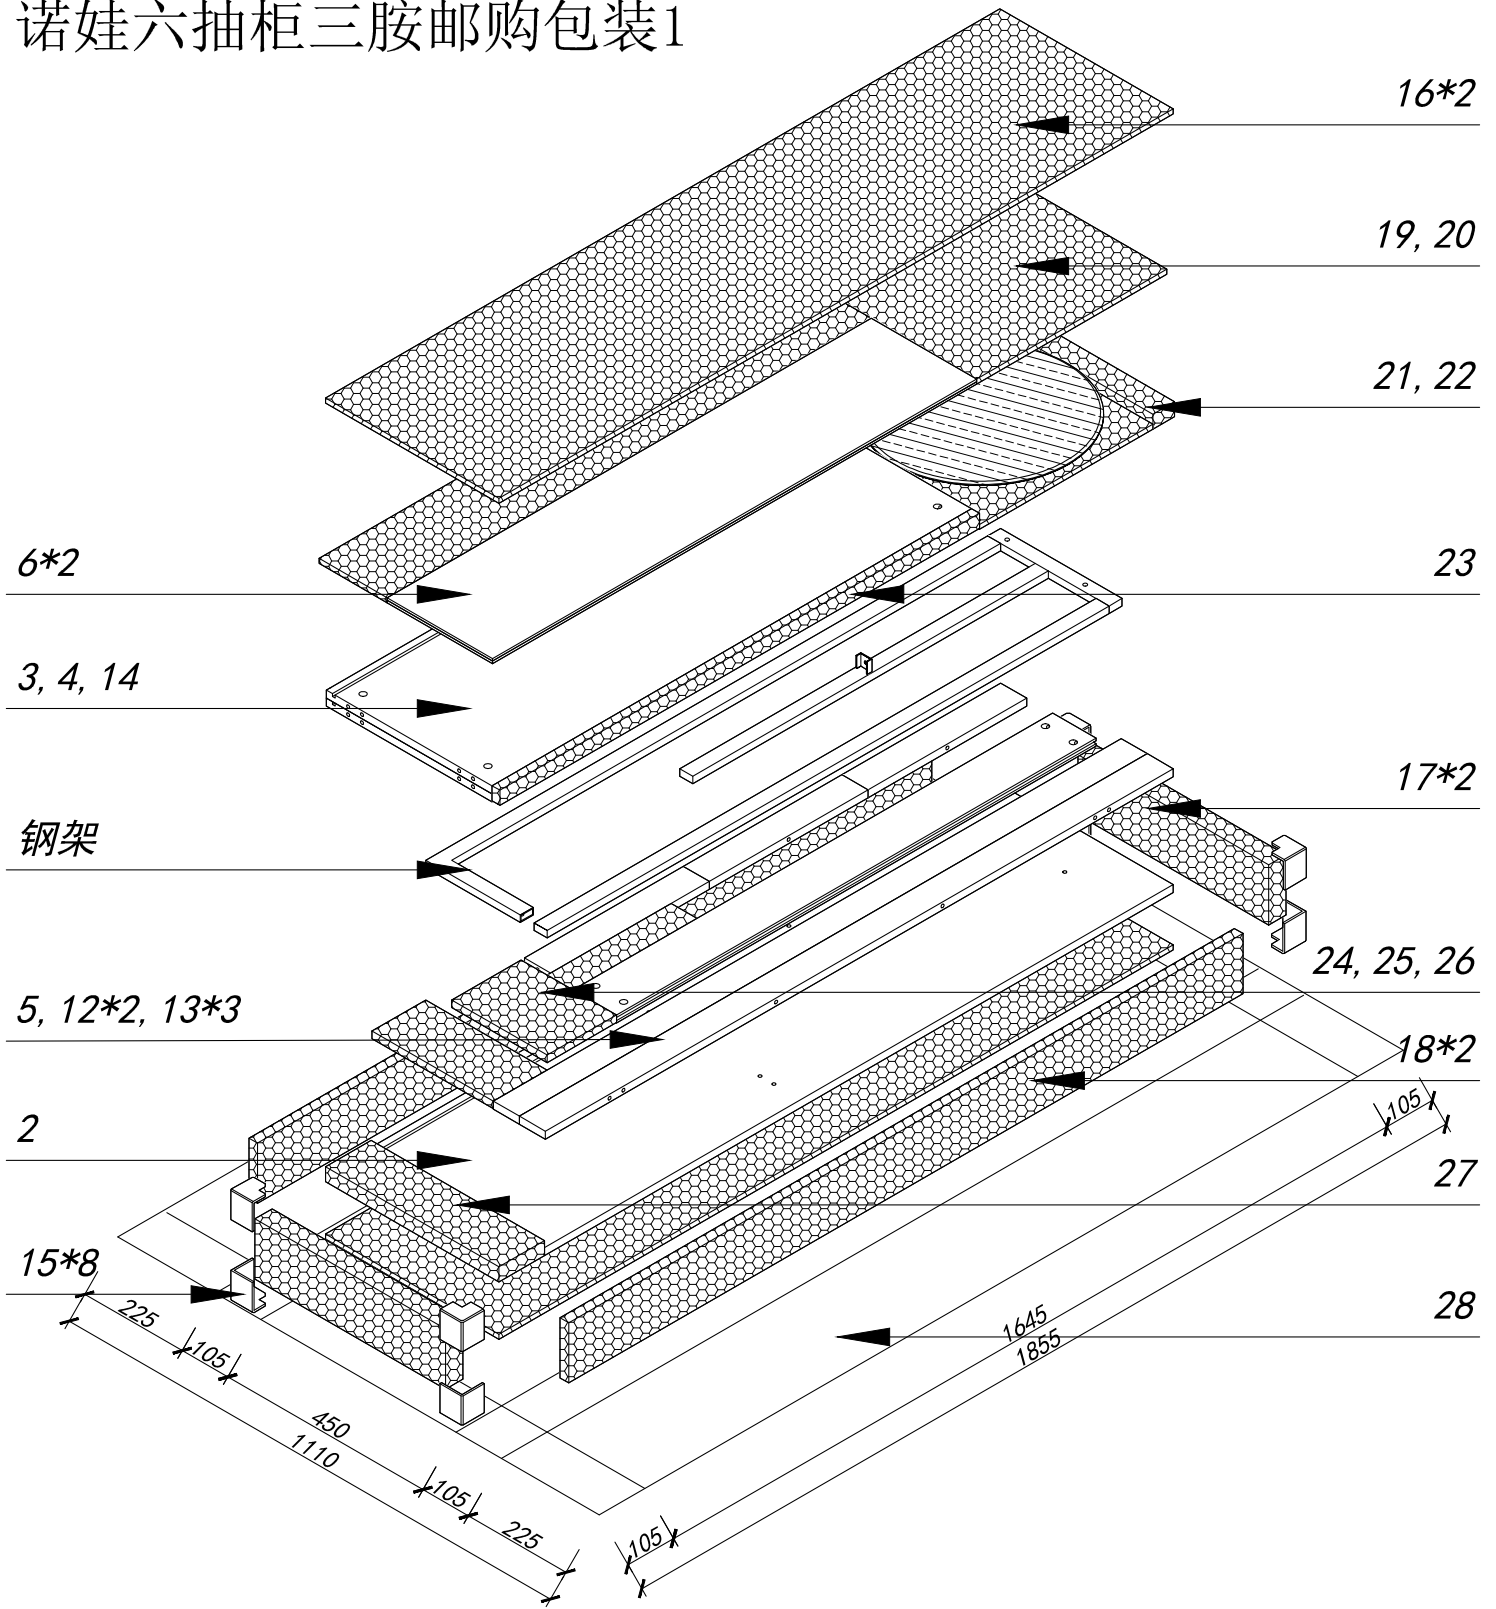

Panel No		Panel Sizes	Quantity
15	护角	50*50*50	8
16	泡沫	1555*400*10	2
17	泡沫	440*95*40	2
18	泡沫	1555*95*20	2
19	泡沫	400*440*10	1
20	泡沫	1116*157*10	1
21	泡沫	400*50*30	1
22	泡沫	400*400*15	1
23	泡沫	1106*18*30	1

Panel No		Panel Sizes	Quantity
24	泡沫	286*60*15	1
25	泡沫	220*160*15	1
26	泡沫	280*124*15	1
27	泡沫	400*105*30	1
28	纸盒	内径1645*450*105	1

诺娃六抽柜三胺邮购包装2

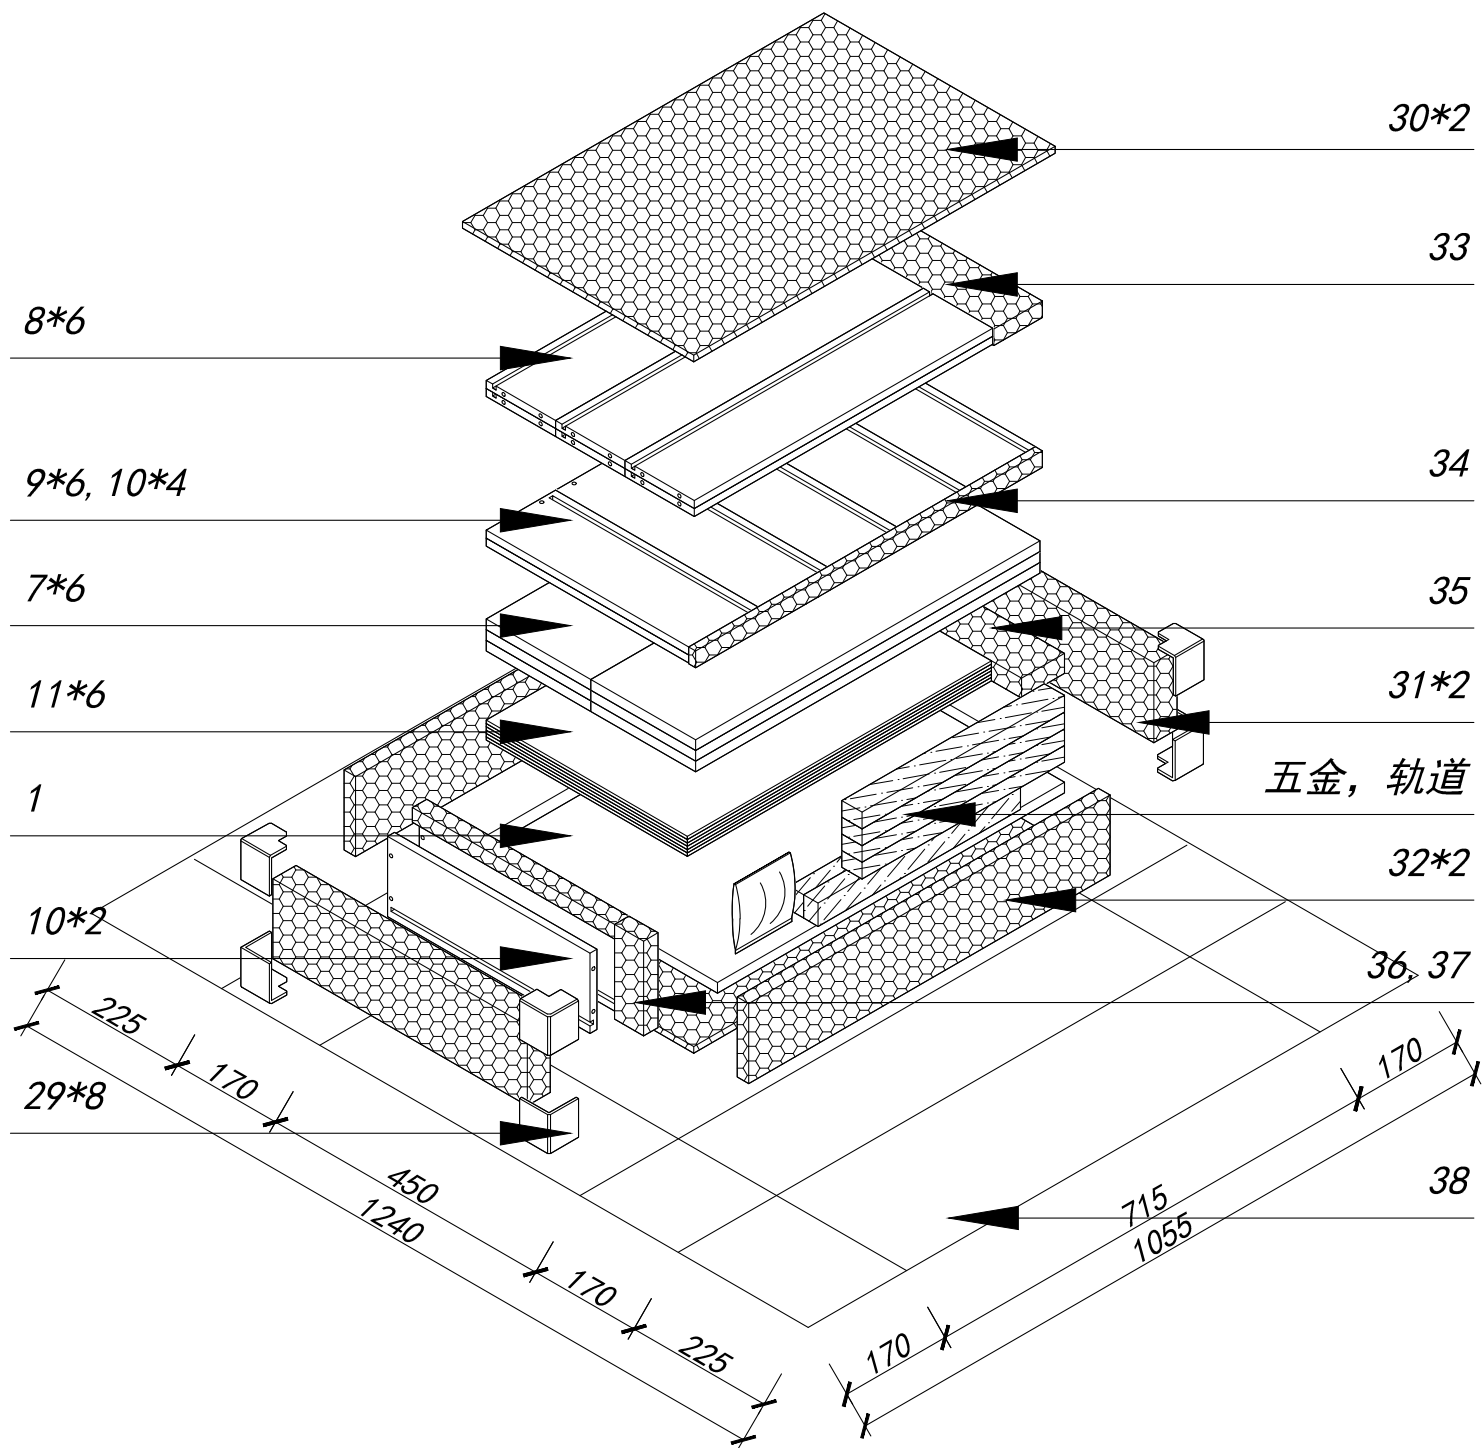

Panel No		Panel Sizes	Quantity
29	护角	50*50*50	8
30	泡沫	600*400*10	2
31	泡沫	440*160*40	2
32	泡沫	600*160*20	2
33	泡沫	362*84*25	1
34	泡沫	600*24*10	1
35	泡沫	400*74*30	1
36	泡沫	142*50*25	1
37	泡沫	350*22*25	1
38	纸盒	内径715*450*170	1